

# Control change assignments for the ARP ODYSSEi's parameter

Ver. 1

Section	UI Name	CC# assign
VOICES	Detune	--
	Spread	--
	Voice Assign	--
	Unison	--
	Voices	--
	Protamento	5
	Mode	--
	Transpose	--
	(PPC b)	Pitch Bend (-)
	(PPC ~)	1
	(PPC #)	Pitch Bend (+)
VCO1	VCO1 Coarse	82
	VCO1 Fine	83
	AUDIO	84
	VCO1 FM1 Source	35
	VCO1 FM1 Depth	36
	VCO1 FM2 Source	37
	VCO1 FM2 Depth	39
	VCO1 PW	40
	VCO1 PW Source	41
	VCO1 PW Mod	42
VCO2	VCO2 Coarse	86
	VCO2 Fine	87
	VCO2 Sync	88
	VCO2 FM1 Source	43
	VCO2 FM1 Depth	44
	VCO2 FM2 Source	45
	VCO2 FM2 Depth	46
	VCO2 PW	47
VCO2 PW Source	48	
VCO2 PW Mod	49	
NOISE	NOISE GENERATOR	60
LFO	Key Sync	22
	Tempo Sync	23
	LFO Freq (Tempo Sync: off)	20
	LFO Freq (Tempo Sync: on)	21
S/H Mixer	S/H Input1 Source	24
	S/H Input1 Level	25
	S/H Input2 Source	26
	S/H Input2 Level	27
	S/H Trigger Source	--
	S/H Output Lag	--
VCF	Filter Cutoff	74
	Filter Resonance	71
	Filter Type	70
	HPF Cutoff	61
	Drive Gain	11
AUDIO MIXER	Mixer Input1	28
	Mixer Input1 Level	29
	VCO1 Waveform	81
	Mixer Input2 Level	30
	VCO2 Waveform	85
	Mixer Input3 Level	31
	Filter Mod1 Source	33
	Filter Mod1 Level	34
	Filter Mod2 Source	50
	Filter Mod2 Level	51
	Filter Mod3 Source	52
	Filter Mod3 Level	53
	Velocity Desitnation	54
	Velocity Intensity	55
	VCA EG Source	56
VCA EG Amount	57	

Section	UI Name	CC# assign
AR EG	EG2 Attack	63
	EG2 Release	62
ADSR EG	EG1 Attack	73
	EG1 Decay	75
	EG1 Sustain	80
	EG1 Release	72
	EG1 Trigger Mode	76
	EG1 Repeat Mode	77
	EG2 Trigger Mode	78
Distortion	Off/On	14
	Type	--
	Drive	89
	Tone	90
	Mix	102
Phaser	On/Off	15
	Manual	103
	Depth	95
	Freq	104
	Resonance	105
Cho/Fla/Ens	On/Off	16
	Type	--
	Depth	106
	Freq	107
	Mix	93
EQ	On/Off	17
	Lo Gain	108
	Mid Freq	109
	Mid Gain	110
	Hi Gain	111
Delay	On/Off	18
	Tempo Sync	--
	Feedback	112
	Time Left (Tempo Sync: off)	113
	Time Right (Tempo Sync: off)	114
	Time Left (Tempo Sync: on)	115
	Time Right (Tempo Sync: on)	116
	Level	94
Reverb	On/Off	19
	Type	--
	Time	117
	Tone	118
	Mix	91
Master	Level	7
Arpeggiator	Off/On/Latch	119
	Mode	--
	Tempo Sync	--
	Freq (Tempo Sync: off)	3
	Freq (Tempo Sync: on)	4
	Steps	2
	Type	--

## KORG INC.

4015-2 Yanokuchi, Inagi-City, Tokyo 206-0812 JAPAN

© 2016 KORG INC.