

# **Warning**

When installing, servicing, or replacing parts for this product, do not perform any action that is not prescribed in the owner's manual.

Do not apply excessive force to the electronic components or connectors on the circuit board, and do not disassemble it. Electrical shock, fire, or malfunction may result.

Before installing this product, disconnect the power supply cable of the device in which it is being installed, and disconnect any cables that connect peripheral devices. Failure to do so may cause electrical shock or malfunctions.

# **Caution**

Do not allow this product to become wet, and do not place objects on top of it. Doing so will cause malfunctions.

Before touching this product, touch a metal part of the device into which it will be installed, so that any static electricity in your body will be discharged. Failure to do so will risk damaging the electronic components by static electricity.

When handling this product, be careful not to touch the leads (wires protruding from the electronic components) on the rear side of the circuit board. Injury may result.

When installing this product, do not touch any unrelated parts or circuit boards. Electric shock or malfunction may result.

When installing this product, be careful not to cut yourself on any sharp edges or parts of this product or of the device into which this product is being installed.

When installing this product, be careful not to drop screws etc. into the device into which this product is being installed.

The manufacturer makes no warranty regarding possible malfunctions or damage that may result from improper use or modification. The manufacturer also will take no responsibility for any damages that may result from loss or disappearance of data.

## **Installing this product**

For the procedure of installing this product, refer to the owner's manual of the device into which the product is being installed. If you have any questions, please contact your local Korg distributor.

## **Cautions when installing an option board**

In order to install the board correctly, please pay attention to the following points.

Be careful of static electricity, which may damage components inside the product or on the board. Before beginning the installation, touch an unpainted metal part of the chassis or the grounding terminal of a grounded device to discharge any static electricity that may be present in your body.

Perform the installation according to the steps given in the directions, making sure that the board is installed correctly and in the correct orientation.

Verify that the option board has been installed correctly. If installation is incorrect, faulty connections or a shorted power supply can cause malfunctions.

All the screws that are removed will be used, so be careful not to lose any.

Using screws of the incorrect shape or length can cause malfunctions or damage to the product. Use only the screws that were included with the option board or the screws that were fastened in the instrument.

When installing or removing the board, be careful not to drop parts or the option board into the instrument.

Make sure that the attaching screws are tightened firmly, and are not loose.

Handle the board with care. Subjecting it to physical shock (by dropping or pressing it) may cause damage or malfunctions.

Be careful not to touch any exposed metal portions of the circuit board, or any parts that are not essential to the installation process.

# **Avertissement**

Lors de l'installation, d'interventions techniques ou du remplacement de pièces pour ce produit, toujours respecter scrupuleusement les instructions du manuel d'utilisation. Ne jamais prendre des mesures qui ne sont pas indiquées.

Ne pas forcer de manière excessive sur les composants électroniques ou sur les connecteurs du circuit ni les démonter. Vous risqueriez de vous électrocuter, de provoquer un incendie ou un mauvais fonctionnement.

Avant d'installer ce produit, débrancher le câble d'alimentation de l'appareil dans lequel il doit être installé et débrancher tous les câbles qui le relient à des périphériques afin d'éviter tout risque d'électrocution ou de mauvais fonctionnements.

# **Attention**

Toujours tenir ce produit à l'écart de l'humidité et ne jamais placer d'éléments lourds dessus afin d'éviter de provoquer un mauvais fonctionnement.

Avant de toucher ce produit, toucher un élément métallique de l'appareil dans lequel il doit être installé de sorte à décharger toute électricité statique éventuelle présente dans votre corps. L'électricité statique risquerait en effet d'endommager les composants électroniques.

Lors des manipulations de ce produit, faire attention de ne pas toucher les fils (sortant des composants électroniques) situés sur la face arrière du circuit car vous risqueriez de vous blesser.

Lors de l'installation de ce produit, ne jamais toucher d'éléments ou de circuits inutilement. Vous risqueriez de provoquer un choc électrique ou un mauvais fonctionnement.

Lors de l'installation de ce produit, veiller à ne pas se couper sur les bords ou éléments tranchants du produit ou de l'appareil dans lequel il doit être installé.

Lors de l'installation du produit, veiller à ne pas laisser tomber de vis, etc. dans l'appareil dans lequel il doit être installé.

Le fabricant ne peut pas être tenu responsable de mauvais fonctionnements possibles ou de dégâts dus à une mauvaise utilisation ou à des modifications. Il ne pourra pas non plus être tenu responsable des conséquences de toute perte ou disparition de données.

## **Installation du produit**

Pour la méthode d'installation de ce produit, se reporter au manuel d'utilisation de l'appareil dans lequel il doit être installé. Pour toute question, consultez votre distributeur local Korg.

## **Précautions à prendre lors de l'installation d'une carte en option**

Afin que la carte soit installée correctement, veuillez considérer les points suivants.

Faire très attention à l'électricité statique qui pourrait endommager les éléments internes du produit ou ceux situés sur la carte. Avant de procéder à l'installation, toucher une partie métallique non peinte du châssis ou de la borne de mise à la terre d'un appareil relié à la terre afin de décharger toute l'électricité statique qui pourrait se trouver dans votre corps.

Réaliser l'installation en respectant les points mentionnés dans les instructions fournies, en veillant à installer la carte correctement et dans le sens adéquat.

Vérifier si la carte en option est installée correctement. Si ce n'est pas le cas, des connexions défectueuses ou une alimentation court-circuitée risquent de provoquer des mauvais fonctionnements.

Toutes les vis que vous avez retirées doivent être réutilisées. Veiller à ne pas les perdre.

L'utilisation de vis de dimensions, de formes ou de longueurs incorrectes peut provoquer un mauvais fonctionnement du produit ou l'endommager. Utiliser uniquement les vis livrées avec la carte en option ou les vis qui étaient fixées à l'instrument.

Lors de l'installation ou du retrait de la carte, faire très attention de ne pas laisser tomber des éléments ou la carte en option dans l'instrument.

Vérifier si les vis de fixation sont bien attachées et si elles sont serrées correctement.

Manipuler la carte avec soin. Eviter de la soumettre à des chocs physiques (en la laissant tomber ou en appuyant dessus) car vous risqueriez de l'endommager ou de provoquer un mauvais fonctionnement.

Eviter soigneusement de toucher toute partie métallique exposée de la carte de circuits ou tout élément qui ne s'avère pas essentiel pour la procédure d'installation.

## **Warnung**

Nehmen Sie während der Installation, bei Reparatur oder Austausch keine Maßnahmen vor, die nicht in dieser Anleitung beschrieben sind.

Wenden Sie keine übermäßige Kraft auf die elektronischen Bauteile oder die Anschlüsse auf der Platine an, und nehmen Sie das Bauteil nicht auseinander. Dies kann zu Stromschlag, Brand oder Fehlfunktion führen.

Ziehen Sie vor der Installation das Netzkabel des Gerätes ab, in das die Karte eingelegt werden soll, und lösen Sie auch alle Verbindungen zu Peripheriegeräten. Wenn dies nicht beachtet wird, kann dies zu Stromschlag oder Fehlfunktion führen.

## **Vorsicht**

Lassen Sie dieses Produkt nicht naß werden, und stellen Sie keine Gegenstände auf das Produkt. Dies kann zu Fehlfunktion führen.

Bevor Sie das Produkt in die Hand nehmen, berühren Sie ein Metallteil des Gerätes, in das Sie die Karte installieren möchten, um eventuell vorhandene statische Elektrizität abzuleiten. Bei Nichtbeachtung können die Bauteile auf der Karte durch statische Entladungen zerstört werden.

Achten Sie bei der Handhabung des Produkts darauf, nicht die Leiterbahnen auf der Unterseite der Karte zu berühren, Sie könnten sich daran verletzen.

Berühren Sie keine anderen Teile oder Platinen im Innern des Instruments. Dies kann zu Stromschlag oder Fehlfunktion führen.

Achten Sie beim Einbau dieses Produkts darauf, sich nicht an scharfkantigen Bestandteilen des Produkts oder des Instruments, in dem diese Karte installiert werden soll, zu verletzen.

Achten Sie bei der Installation darauf, in dem Instrument, in dem diese Karte installiert werden soll, keine Schrauben usw. zu verlieren.

Der Hersteller übernimmt keine Garantie für Fehlfunktionen oder Schäden, die durch unsachgemäßen Einbau oder Veränderungen am Produkt entstanden sind. Der Hersteller übernimmt des weiteren ebenfalls keine Garantie auf Integrität oder Erhalt Ihrer Daten.

## **Einbau dieses Produkts**

Für Einzelheiten zur Installation dieses Produkts lesen Sie bitte die Bedienungsanleitung des Instruments, in das sie eingebaut werden soll. Wenn Sie Fragen haben, wenden Sie sich bitte an Ihren Korg-Händler.

## **Vorsichtsmaßnahmen für den Einbau einer Erweiterungskarte**

Um die Karte (Platine) sachgemäß einzubauen zu können, sollten Sie folgende Punkte beachten:

Achten Sie auf statische Elektrizität, die Komponenten des Produkts bzw. auf der Platine beschädigen könnte. Berühren Sie vor dem Einbau ein blankes (nicht lackiertes) Metallteil oder den Massekontakt eines geerdeten Gerätes, um jegliche statische Elektrizität abzuleiten, die sich in Ihrem Körper befinden könnte.

Führen Sie den Einbau genau nach den Schritten der Beschreibung durch, und achten Sie darauf, daß die Karte richtig und in der richtigen Ausrichtung eingebaut wird.

Prüfen Sie, ob die Erweiterungskarte richtig eingesetzt wurde. Wenn die Karte fehlerhaft eingesetzt wurde, können falsche oder fehlende Verbindungen oder eine kurgeschlossene Stromversorgung Fehlfunktionen verursachen.

Alle gelösten Schrauben werden bei oder nach dem Einbau wieder benötigt; achten Sie daher darauf, keine davon zu verlieren.

Die Verwendung von Schrauben falscher Größe oder Form kann zu Fehlfunktionen oder Schäden am Produkt führen. Verwenden Sie ausschließlich die mit der Karte mitgelieferten Schrauben oder diejenigen, die sich im Instrument befanden.

Achten Sie beim Ein- oder Ausbau der Karte darauf, keine Teile oder die Karte selbst in das Instrument fallen zu lassen.

Achten Sie auf festen Sitz der Schrauben. Lose Schrauben können herausfallen und Kurzschlüsse verursachen.

Behandeln Sie die Karte mit Vorsicht. Fallenlassen oder starkes Verbiegen kann zu Fehlfunktion bzw. Schäden führen.

Achten Sie darauf, keine Metallteile der Leiterplatte oder Teile zu berühren, die nicht für den Einbauvorgang notwendig sind.

## **警告**

 本製品の取り付け、修理、部品の交換などで、取扱説明書に記載されている以外のことは絶対にしないでください。

 本製品の基板上の電子部品やコネクタには無理な力を加えたり、分解したりしないでください。感電、火災、故障の原因になります。

 本製品を取り付ける前に、取り付ける機器の電源プラグと、周辺機器との接続コードを必ず抜いてください。感電や機器の破損の原因になります。

## **注意**

 本製品を液体でぬらしたり、異物をのせたりしないでください。故障の原因になります。

 本製品を触る前に、取り付ける機器の金属部に触れ、静電気を取り除いてください。静電気により電子部品を破損する恐れがあります。

 本製品を取り扱うときは、基板裏側のリード(電子部品の足部)に触れないように作業してください。けがをする恐れがあります。

 本製品を取り付ける際は、接続と関係のない部品や基板には絶対に触れないでください。感電や故障の原因になります。

 本製品を取り付ける際は、本製品や取り付ける機器の金具等で手を切らないように作業してください。

 本製品を取り付ける際は、取り付ける機器の中にネジなどを落とさないように作業してください。

誤った使用や改造による故障、破損の保証はいたしません。また、データの消失、破損による損害についても、当社は一切の責任を負いかねますのでご了承ください。

## **本製品の取り付け方**

本製品の取り付け方法については、取り付ける機器の取扱説明書をご覧ください。ご不明な点はコルゲ・インフォメーションへお問い合わせください。

## **オプション・ボード取り付け時の注意**

正しく取り付けるときは、以下の項目に注意して作業を行ってください。

- ・製品内部やボード上の部品に影響をあおぼす静電気の発生に注意してください。取り付け作業をするときは、あらかじめ体の静電気を逃がすように塗装面以外の金属部分に触れておいたり、アースがとれている機器のアース線に触れたりなどしてください。
- ・取り付ける部品や、取り付け方向を間違えないように、手順どおりに作業してください。
- ・オプション・ボードの取り付けが、確実に行われていることを確認してください。取り付けが不十分だと、接触不良や電源のショートをおこして故障の原因になります。
- ・はずしたネジはすべて使用するので、なくさないようにしてください。
- ・形や長さの違うネジを使用すると、製品の故障や破壊の原因になることがあります。オプション・ボードの付属品、または本体に取り付けられているネジ以外は使用しないでください。
- ・取り付けまたは取り外しのとき、部品やオプション・ボードなどを本体内部へ落とさないようにしてください。
- ・取り付けたネジはゆるみがなく確実に締まっていることを確認してください。
- ・ボードの取り扱いは十分に注意してください。衝撃(落としたり、強く押さえる)を与えると、製品の故障や破壊の原因になることがあります。
- ・基板の金属が露出している部分や、取り付けに必要なない部分に触れないようにしてください。

**KORG KORG INC.**

15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo, Japan

© 1999 KORG INC.

**Printed in Japan**

## Programs

### EXB-PCM01 (C\_BANK.PCG / D\_BANK.PCG)

#	Name	Category	Arpeggiator SW Arpeggio Pattern
000 d	Stereo Grand 1+2	Keyboard	Off U137: Step Saw Down
001 d	Soft Grand 1 ST	Keyboard	Off U017: Reggae Strumming
002 d	Z.E.P <([No]/4)>	Keyboard	Off P000: UP
003 d	Rockin' Classic	Organ	Off U101: Vice Squad
004 d	Clav 3 w/KeyOff	Keyboard	Off U015: Bossa Guitar
005 d	Piano & Halo	Keyboard	Off U089: Steady!
006 d	Velo ST Suit. EP	Keyboard	Off U068: 7-tone Ostinato
007 s	Jazz Rotary	Organ	Off U097: Staccato Tech
008 d	Harpis&Eng.Horn	Keyboard	Off U141: Cresc/Decresc
009 d	SG Hybrid Piano	Keyboard	Off P004: RANDOM
010 d	Wah Wurl'y (-Y)	Keyboard	Off U017: Reggae Strumming
011 d	Prog Rock Organ	Organ	Off P002: ALTERNATE1
012 d	Clav Talkin'	Keyboard	Off U122: Techno Riff 11
013 d	Millennium Keys	Keyboard	Off U015: Bossa Guitar
014 s	Concert Grand	Keyboard	Off U031: DanceBass Riff 2
015 d	Flying E. Piano	Keyboard	On U139: Dittos
016 d	Full-Body Piano	Keyboard	Off P002: ALTERNATE1
017 d	Stereo Piano 2	Keyboard	Off U011: CountryPicking GT
018 d	A.Piano Brt ST	Keyboard	Off U026: House Piano
019 s	SG-1D Piano	Keyboard	Off U026: House Piano
020 s	Dark Classical P	Keyboard	Off U123: Echo Riff
021 d	Balls'O Fire P.	Keyboard	Off U089: Steady!
022 s	Trinity Grand	Keyboard	Off U065: Gated Pattern 1
023 d	SG Grand Bright	Keyboard	Off U059: Happy Dog
024 s	Soft Grand 2	Keyboard	Off U024: Piano Comp 1
025 d	LongString Piano	Keyboard	Off U079: 5-tone Vel Trip2
026 d	New Orleans Uprt	Keyboard	Off U059: Happy Dog
027 d	Wide ST Piano	Keyboard	Off P002: ALTERNATE1
028 d	Tack Piano	Keyboard	Off U136: Route+Up&Down
029 d	Salsa Keys	Keyboard	Off U026: House Piano
030 d	Ballad Grand+Str	Keyboard	Off U028: String Melody
031 d	Piano&AnaStrings	Keyboard	Off U140: Trickle
032 d	E. Grand Hybrid	Keyboard	Off P001: DOWN
033 d	Player Piano	Keyboard	Off U139: Dittos
034 d	Praise Hymn!	Keyboard	Off U095: Retro Pattern
035 s	House Piano BPM	Keyboard	Off U058: Syncopation
036 d	Life goes on...	Keyboard	Off U137: Step Saw Down
037 d	Bright E. Grand	Keyboard	Off U055: TechnoBass Riff3
038 d	Stereo E. Grand	Keyboard	Off P004: RANDOM
039 d	70's E. Grand	Keyboard	Off U049: 70's Disco Bass
040 d	Magic E. Grand	Keyboard	Off U002: Guitar Strum 3
041 d	Aggressive Pad	Keyboard	Off U129: Speed Sequence
042 d	Water Piano	Keyboard	Off U134: CrazyComputer 3
043 d	White-Pad Piano	Keyboard	Off U081: Echo Chords 1
044 d	Funky Rez Piano	Keyboard	Off U021: Funk Bass/Guitar
045 d	Power Grand	Keyboard	Off P001: DOWN
046 d	Piano Brushes	Keyboard	Off U125: Trace Riff 1
047 d	Stab Piano	Keyboard	Off U090: Euro Lights
048 d	Piano Scapes	Keyboard	Off P004: RANDOM
049 d	Vocal Piano Keys	Keyboard	Off U014: BalladPicking2GT
050 d	Icy Piano Pad	Keyboard	Off U137: Step Saw Down
051 d	Wavy 88's	Keyboard	Off P004: RANDOM
052 d	80's Piano Lead	LeadSynth	Off U120: Techno Riff 9
053 d	Doo Piano	LeadSynth	Off U072: 5-tone Trance 2
054 d	Old 78 Toy Piano	Keyboard	Off U029: Arco Arpeggio
055 d	Beat-Up EP	Keyboard	Off P004: RANDOM
056 d	Velo ST Stage EP	Keyboard	Off U070: 4-tone Trance
057 d	Hard Dyno EP	Keyboard	Off U015: Bossa Guitar
058 d	Smooth Chorus EP	Keyboard	Off P000: UP
059 d	Suit. & Stage EP	Keyboard	Off U028: String Melody
060 d	Hollow Tine EP	Keyboard	Off U059: TechnoBass Riff3
061 d	Stage Bell EP	Keyboard	Off U062: Stepping Note
062 d	Crystal Pnet	Keyboard	Off U129: Speed Sequence
063 s	Velo Pnet	Keyboard	Off U080: 5-tone Climb

s: single program, d: double program

## Programs

### EXB-PCM02 (C\_BANK.PCG / D\_BANK.PCG)

#	Name	Category	Arpeggiator SW Arpeggio Pattern
000 d	Mmmmmooooah Vib.	Vocal/Airy	Off U064: Trance Comp-Maj
001 d	Scoring Strings	Strings	Off U201: StringsRiff 02
002 d	Flute Duo	Woodwind/Reed	Off U129: Speed Sequence
003 d	Brassexpress	Brass	Off U208: BrassRit 01
004 d	Cumulonimbus	FastSynth	Off U012: CountryPicking2GT
005 d	Paris Accordion	Woodwind/Reed	Off U063: Trance Comp
006 s	Saxes in Band	Woodwind/Reed	Off U211: BrassRit 04
007 d	Chamber Strings	Strings	Off U207: StringsRiff 02
008 d	SmallGospelChoir	Vocal/Airy	Off U070: 4-tone Trance
009 d	CupMuted Trumpet	Brass	Off U209: BrassRit 02
010 d	Evocative	MotionSynth	Off P004: RANDOM
011 d	KeyToThePad	Keyboard	Off P004: RANDOM
012 d	MetalTop Guitar	Guitar/Plucked	Off U012: CountryPicking2GT
013 d	Octave Strings2	Strings	Off U137: Step Saw Down
014 d	FluteAttack Pad	FastSynth	Off P003: ALTERNATE2
015 s	Chinese Violin	Strings	Off U206: StringsRiff 01
016 s	Phunk Clav	Keyboard	Off U021: Funk Bass/Guitar
017 d	Vocal Aire	Vocal/Airy	Off U061: Rumb
018 d	Vibratin'Ahs	Vocal/Airy	Off U009: Euro Lights
019 d	Ooh&Ahs (Vel)	Vocal/Airy	Off U100: Expressive Triad
020 d	Church Chorale	Vocal/Airy	Off U124: Random Techno
021 d	Uhm Stereo	Vocal/Airy	Off U203: StringsRiff 04
022 s	Mello Vox	Vocal/Airy	Off P002: ALTERNATE1
023 d	Aah Stereo	Vocal/Airy	Off U026: House Piano
024 d	Hum VibratoDelay	Vocal/Airy	Off U207: StringsRiff 02
025 d	Epic Choir	Vocal/Airy	Off U200: StringsRiff 01
026 d	Oooohmmmm Vox	Vocal/Airy	Off U109: Up uP Up uP
027 d	HummingBreath	Vocal/Airy	Off P004: RANDOM
028 d	Cyborg Vox	Vocal/Airy	Off U058: Syncopation
029 d	Uhm Vibrato	Vocal/Airy	Off U128: Quarks
030 d	Lush Vocals	Vocal/Airy	Off U066: Gated Pattern 2
031 d	Vel Voices	Vocal/Airy	Off U028: String Melody
032 d	Ooh Women	Vocal/Airy	Off U090: Euro Lights
033 d	Aah Men	Vocal/Airy	Off U090: Euro Lights
034 d	Symphony Strings	Strings	Off U205: StringsRiff 06
035 d	Marcato Strings	Strings	Off P002: ALTERNATE1
036 d	TrueStereoString	Strings	Off U207: StringsRiff 02
037 d	AroStereo Strg.	Strings	Off U202: StringsRiff 03
038 d	Platinum Strings	Strings	Off P002: ALTERNATE1
039 d	Slow Strings	Strings	Off U200: StringsRiff 01
040 d	Decay Strings	Strings	Off U206: StringsRiff 01
041 d	Low Strings	Strings	Off U204: StringsRiff 05
042 s	Small Strings	Strings	Off U201: StringsRiff 02
043 d	SmallStringEns	Strings	Off U079: 5-tone Vel Trip2
044 d	Violin Section	Strings	Off U203: StringsRiff 04
045 d	Cellos Renforce	Strings	Off U081: Echo Chords 1
046 d	Cello Section	Strings	Off U094: Kalimba Groove
047 d	Tremolo Strings	Strings	Off U009: Arco Arpeggio
048 d	TremStrings Sfz	Strings	Off U122: BrassRit 05
049 d	Strings & Winds	Strings	Off U095: Retro Pattern
050 d	Strings & Brass	Strings	Off U084: Echo Chords 4
051 d	VelPizz Strings	Strings	Off U028: String Melody
052 d	Strings & Voices	Strings	Off U208: BrassRit 01
053 d	Choir & Strings	Strings	Off U009: Steady!
054 s	SilverFluteVib.	Woodwind/Reed	Off U100: Expressive Triad
055 d	Alto Flute	Woodwind/Reed	Off U207: StringsRiff 02
056 d	Mello Flute	Woodwind/Reed	Off U122: Techno Riff 11
057 d	Oboe & Flute	Woodwind/Reed	Off U128: Quarks
058 s	Bass Clarinet	Woodwind/Reed	Off U129: Speed Sequence
059 s	Woodwinds	Woodwind/Reed	Off U128: Quarks
060 d	Parlour Ensemble	Woodwind/Reed	Off U100: Expressive Triad
061 d	SopranoSax-Xfade	Woodwind/Reed	Off U132: CrazyComputer 1
062 s	Soprano Sax	Woodwind/Reed	Off U135: Pentatonic
063 d	SopranoSax FFF	Woodwind/Reed	Off U138: minor9th rise

s: single program, d: double program

#	Name	Category	Arpeggiator SW Arpeggio Pattern
064 d	Pneutnicello	Keyboard	Off P002: ALTERNATE1
065 d	Pent Pad	Keyboard	Off U100: Expressive Triad
066 d	Harmonic Keys	Keyboard	Off U141: Cresc/Decresc
067 d	VS Magic Keys	Keyboard	Off U127: Trace Riff 3
068 d	Wavetable EP	Keyboard	Off P004: RANDOM
069 d	EP Pad Sweep	Keyboard	Off U141: Cresc/Decresc
070 d	Mega Piano Pad	Keyboard	Off P000: UP
071 d	Tinkle Tines	Keyboard	On P004: RANDOM
072 d	Digi Sunshine	SlowSynth	Off U134: CrazyComputer 3
073 d	VSine E. Piano	Keyboard	Off U058: Syncopation
074 d	Whirling Whirly	Keyboard	Off U059: Happy Dog
075 d	HybridDynaWhirly	Keyboard	Off U079: 5-tone Vel Trip2
076 d	Clavon Whirly	Keyboard	Off U125: Trace Riff 1
077 d	Dynamic Duo	Keyboard	Off U027: Clavi Comp
078 s	Clav 2 Velo-Wah	Keyboard	Off U026: House Piano
079 d	Clav 3 Muted	Keyboard	Off U021: Funk Bass/Guitar
080 d	Funky Clav Mute	Keyboard	Off U019: Funky Strums GT
081 d	Clav & EP Blend	Keyboard	Off U027: Clavi Comp
082 d	HarpsiClav Attk.	Keyboard	Off U017: Reggae Strumming
083 d	Warm Clavi Pad	Keyboard	Off P001: DOWN
084 s	Clav 1 Mute SW#1	Keyboard	Off U049: 70's Disco Bass
085 d	Clavilead Synth	LeadSynth	Off U101: Vice Squad
086 d	Harpsichord 8'	Keyboard	Off U136: Route+Up&Down
087 d	Harpsichord 8'4"	Keyboard	Off P003: ALTERNATE2
088 d	Harpsi 16'8+4'		

## Combinations

### EXB-PCM01 (C\_BANK.PCG / D\_BANK.PCG)

#	Name Category	Arp.SW A Pattern B Pattern	Run Run	#	Name Category	Arp.SW A Pattern B Pattern	Run Run
000	Ethereal Piano Rhythmic Pattern	On U157: Drum'n'Bass 5 U175: BD/HH/SD 16ths	On On	037	Clavinet Keyboard	Off U047: Chaser Bass U066: Gated Pattern 2	On On
001	Jazzy "B" Organ	Off U153: Drum'n'Bass 1 U043: Trance Bass Riff	On On	038	SFZ Orch Brass BrassReed	Off U029: Arco Arpeggio U029: Arco Arpeggio	On On
002	ST Grand & Strs Keyboard	Off U137: Step Saw Down U136: Route+Up&Down	On On	039	Pno/Str & Cellos Strings	Off U068: 7-tone Ostinato U077: 4-tone Vel Trip	On On
003	70's EP Bliss Rhythmic Pattern	On U086: Dance Comp 2 U165: Smooth Hop	On On	040	Deep Crystals Bell/Mallet/Perc	Off U094: Kalimba Groove U004: RANDOM	On On
004	Velocity Clav Rhythmic Pattern	On U150: Bossa Nova U164: New Disco 2	On On	041	Wedding Day Organ	Off P003: ALTERNATE2 U003: ALTERNATE2	On On
005	Base&WhirlySplit BassSplits	Off U152: Heavy Rock U052: Stagger Bass	On On	042	Gigs With Plants Orchestral	Off U133: CrazComputer 2 U081: Echo Chords 1	On On
006	StereoPianoTrio BassSplits	Off U149: Jazz 2 U177: Percussion	On On	043	Sleep Beckons Keyboard	Off U176: BD/HH 16ths U178: Raga-matic	On On
007	Grand Ensemble Orchestral	Off U029: Arco Arpeggio P003: ALTERNATE2	On On	044	Jazz Gtr. Trio Rhythmic Pattern	On U165: Smooth Hop P000: UP	On Off
008	BX-Split Rhythmic Pattern	On U148: Jazz 1 U051: Old Dance Bass 2	On On	045	Manual-Split Rhythmic Pattern	On U148: Jazz 1 U054: Walkin' Bass	On On
009	EXP Lead Keys Rhythmic Pattern	On U151: Latin-drums U177: Percussion	On On	046	Millennium Pad MotionSynth	On P004: RANDOM P004: RANDOM	On On
010	Pianistic Voices Keyboard	Off U157: BD/HH/SD 16ths U177: Percussion	On On	047	Stf->Hrd Piano Keyboard	Off U150: Bossa Nova U053: Latin Bass	On On
011	Triton Orchestra	Off U029: Arco Arpeggio P003: ALTERNATE2	On On	048	New Horizons LeadSplits	Off P001: DOWN P004: UP	On On
012	Jazzy R&B Organ	Off P004: RANDOM U003: ALTERNATE2	On On	049	It's Polka Time! Rhythmic Pattern	On U174: Straight Ds U174: Straight Ds	On Off
013	Groove Maker Rhythmic Pattern	On U167: HipHop 2 U166: HipHop 1	On On	050	Hollywood Divisi Strings	Off P002: ALTERNATE1 P003: ALTERNATE2	On On
014	ST Grand & BRS Keyboard	Off U175: BD/HH/SD 16ths U154: Drum'n'Bass 2	On On	051	Vivaldi-esque Orchestral	Off P002: ALTERNATE1 U059: Happy Dog	On On
015	Dreamy Piano Keyboard	On P003: ALTERNATE2 P000: UP	On Off	052	Magic Kingdom Bell/Mallet/Perc	On U139: Dittos U123: Echo Riff	On On
016	Walking on Mars Rhythmic Pattern	On U168: BigBeats 1 U172: 4 on the floor	On On	053	Morphorganics Organ	Off U150: Bossa Nova U053: Latin Bass	On On
017	Velo Perc Organ Organ	Off U175: BD/HH/SD 16ths U177: Percussion	On On	054	Brass Winds Orchestral	Off U029: Arco Arpeggio U081: Echo Chords 1	On On
018	Majestic Strings Strings	Off U029: Arco Arpeggio U003: ALTERNATE2	On On	055	Sweet Keys Keyboard	Off U105: 16 Chord Beat P004: RANDOM	On On
019	Jazz Lite Rhythmic Pattern	On U156: Drum'n'Bass 4 U178: Raga-matic	On On	056	Split Galaxy MotionSynth	On P004: RANDOM U137: Step Saw Down	On On
020	World Groove Box Rhythmic Pattern	On U178: Raga-matic U040: Open Funk Bass 2	On On	057	Heavy Organ	Off U168: BigBeats 1 U172: 4 on the floor	On On
021	LivingInSpace Keyboard	Off P003: ALTERNATE2 P002: ALTERNATE1	On On	058	Auto Piano	On U102: ONCE! U102: ONCE!	On On
022	Orchestral Bells Orchestral	Off U136: Route+Up&Down P002: ALTERNATE1	On On	059	RockinTheWorld Rhythmic Pattern	On U152: Heavy Rock U145: 8 Beat	On On
023	Wave Motion EP Keyboard	Off U105: 16 Chord Beat P004: RANDOM	On On	060	Dancing Bells Bell/Mallet/Perc	On P004: RANDOM P004: RANDOM	On On
024	In My Dreams LeadSplits	On P003: ALTERNATE2 P002: ALTERNATE1	On On	061	Wild Man Jam Ds/Hits	On U163: New Disco 1 U033: TechnoBass Riff1	On On
025	Dirty 13-Organ Organ	Off U175: BD/HH/SD 16ths U178: Raga-matic	On On	062	Power Tool Synth	Off U164: New Disco 2 P000: UP	On Off
026	Soaring Grand Keyboard	On P002: ALTERNATE1 P000: UP	On Off	063	LOGO Soundbyte Complex & SE	On P000: UP U015: Bossa Guitar	On On
027	Groove=>Motion Rhythmic Pattern	On U101: Vice Squad U176: BD/HH 16ths	On On	064	Med. ST Ac-Piano Keyboard	Off U150: Bossa Nova P000: UP	On Off
028	Flying Bells Bell/Mallet/Perc	On U094: Kalimba Groove P004: RANDOM	On On	065	70sOrgan(K1-4) Organ	Off U154: Drum'n'Bass 2 U049: 70s Disc Bass	On On
029	Heat The Beat Ds/Hits	On U167: HipHop 2 U177: Percussion	On On	066	Serenade Orchestral	Off P002: ALTERNATE1 P002: ALTERNATE1	On On
030	Miles From Mars Rhythmic Pattern	On U145: 8 Beat P000: UP	On Off	067	EXP Layer Keys Keyboard	Off U176: BD/HH 16ths U177: Percussion	On On
031	Shangri-La Rhythmic Pattern	On U178: Raga-matic P000: UP	On On	068	Highway Hang Ds/Hits	On U168: BigBeats 1 U038: Hip Hop Bass 1	On On
032	Soft ST Ac-Piano Keyboard	Off U150: Bossa Nova P000: UP	On Off	069	Back Roads Keyboard	Off U145: 8 Beat U177: Percussion	On On
033	3 Pipes On SW1/2 Organ	Off U037: Acid Bass Riff U045: Funky Tekno Bass	On On	070	Strings & Winds Orchestral	Off P003: ALTERNATE2 U003: ALTERNATE2	On On
034	Expressive Orch Orchestral	Off P002: ALTERNATE1 U123: Echo Riff	On On	071	StereoGrandPiano Keyboard	Off U157: Drum'n'Bass 5 U177: Percussion	On On
035	Standard EP Keyboard	Off U170: Acid Drum U177: Percussion	On On	072	Piano Sweep Keyboard	Off U178: Raga-matic P000: UP	On Off
036	Talkin' Trash Rhythmic Pattern	On U164: New Disco 2 U165: Smooth Hop	On On	073	BX-3 Perc Organ Organ	Off P000: UP P002: ALTERNATE1	On On

## Combinations

### EXB-PCM02 (C\_BANK.PCG / D\_BANK.PCG)

#	Name Category	Arp.SW A Pattern B Pattern	Run Run	#	Name Category	Arp.SW A Pattern B Pattern	Run Run
000	Studio Strings Strings	Off U178: Raga-matic U173: Ethnic Perc.	On On	037	Warm Orchestra	Off U029: Arco Arpeggio P003: ALTERNATE2	On On
001	Piano & More Keyboard	Off U151: Latin-drums U166: HipHop 1	On On	038	Ethno Groove Box Rhythmic Pattern	On U173: Ethnic Perc. U013: BalladPicking GT	On On
002	MisterY Complex & SE	On U107: 8th Chunk	On Off	039	Who Loves You? Rhythmic Pattern	On U155: Drum'n'Bass 3 U162: House 2	On On
003	Majestic Men Pads	Off U154: Drum'n'Bass 2 P002: ALTERNATE1	On On	040	Power Horns BrassReed	Off P000: UP P000: UP	On Off
004	Street Beats Rhythmic Pattern	On U177: Percussion U167: HipHop 2	On On	041	RezKap Bass Rhythmic Pattern	On U167: HipHop 2 U152: Heavy Rock	On On
005	Hawaii 5-Horns BrassReed *	Off P000: UP P000: UP	On Off	042	Oakland Funk Org Rhythmic Pattern	On U151: Latin-drums U175: BD/HH/SD 16ths	On On
006	ChineseSoloER-HO LeadSplits	Off U008: Guitar Picking U137: Step Saw Down	On On	043	Groove Monga Ds/Hits	On U021: Funk Bass/Guitar U145: 8 Beat	On On
007	Cool Band Split BassSplits	Off U145: 8 Beat P000: UP	On Off	044	Clarinet Family Orchestral	Off P000: UP U057: Root... Fifth...	On On
008	Horror Orchestra Orchestral	On U110: Random U111: Random Up	On On	045	4am in NYCity BrassReed	Off U173: Ethnic Perc. P000: UP	On Off
009	Silver Linning MotionSynth	On U178: Raga-matic U167: HipHop 2	On On	046	Band Of Power Rhythmic Pattern	On U021: Funk Bass/Guitar U152: Heavy Rock	On On
010	Old Thriller Set Rhythmic Pattern	On P000: UP U165: Smooth Hop	On On	047	Urban Funk BassPicks	Off U169: Bigbeats 2 P000: UP	On Off
011	Acid Clav Rhythmic Pattern	On U065: Gated Pattern 1 U170: Acid Drum	On On	048	Philharmonic Orchestral	Off P000: UP P000: UP	On On
012	Studio Orchestra Orchestral	Off P002: ALTERNATE1 U123: Echo Riff	On On	049	Humming Piano Pad * Keyboard	Off P000: UP P000: UP	On On
013	Asian Forest World	On U173: Ethnic Perc. P000: UP	On Off	050	TritonBite Synth	Off P003: ALTERNATE2 P000: UP	On Off
014	Big TremoloStrgs Strings	Off P000: UP P000: UP	On Off	051	Boxy Choir Pads	Off U178: Quarks U086: Dance Comp 2	On On
015	Laos Parade World	On U173: Ethnic Perc. U151: Latin-drums	On On	052	R&B Organ	Off P003: ALTERNATE2 P002: ALTERNATE1	On On
016	Woodstrings Orchestral	Off P000: UP P001: DOWN	On On	053	Monks In Tibet World	Off P003: ALTERNATE2 U029: Arco Arpeggio	On On
017	Pegasus Piano Keyboard	Off P000: UP P000: UP	On On	054	Bell Padding Pads	Off P004: RANDOM P000: UP	On On
018	Chorvoker Complex & SE	On U156: Drum'n'Bass 4 U087: Flashin' Arp	On Off	055	Fat BBand Brass	Off U166: HipHop 1 U035: TechnoBass Riff3	On On
019	CelestialMeeting Pads	Off P000: UP P000: UP	On On	056	Soprano KG split LeadSplits	Off U174: Piano Comp 1 U033: Latin Bass	On On
020	Red Hot Tubes Organ	Off U152: Heavy Rock U177: Percussion	On On	057	Studio 12 String Guitar/Plucked	Off U008: Guitar Picking U105: Bossa Guitar	On On
021	Strings Dynamore Strings	Off P000: UP P000: UP	On On	058	Nebulous Keys * Keyboard	Off P000: UP P000: UP	On On
022	Tech Trip Complex & SE	On U128: Quarks P000: UP	On Off	059	ClassicOrchHits Ds/Hits	Off U103: TechnoBass Riff1 U036: Tribal Bass	On On
023	BrassensembleAmp BrassReed *	Off P000: UP P000: UP	On Off	060	WoodsProgression Orchestral	Off P000: UP P000: UP	On On
024	>Solo< Rhythmic Pattern	On U156: Drum'n'Bass 4 U087: Flashin' Arp	On Off	061	Evaporation Pads	Off P003: ALTERNATE2 P000: UP	On Off
025	Bass & TechVox Rhythmic Pattern	On U154: Drum'n'Bass 2 U036: Tribal Bass	On On	062	Bad Girlz Rhythmic Pattern	On U169: Bigbeats 2 U167: HipHop 2	On On
026	PaddedKeys<>Keyboard	Off P000: UP P000: UP	On Off	063	Vintage Rockers Rhythmic Pattern	On U012: CountryPicking2GT U152: Heavy Rock	On On
027	FunkystudioClav Keyboard	Off U168: BigBeats 1 U167: HipHop 2	On On	064	Octestra * Orchestral	Off P000: UP P000: UP	On On
028	TritonEXPStrings Strings	Off P002: ALTERNATE1 P003: ALTERNATE					