

AX3000B

MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	1 – 16 1 – 16	1 – 16 1 – 16	Memorized
Mode	Memorized Messages Altered	× × *****	3 × ×	
Note Number:	True Voice	× *****	× *****	
Velocity	Note On Note Off	× ×	× ×	
Aftertouch	Polyphonic (Key) Monophonic (Channel)	× ×	× ×	
Pitch Bend		×	×	
Control Change	0–95	○	○	Effect Control *C
Program Change	Variable Range	○ 0 – 95 *****	○ 0 – 95 0 – 95	*P
System Exclusive		○	○	Parameter Control Program Data Dump *E *1
System Common	Song Position Song Select Tune	× × ×	× × ×	
System Real Time	Clock Command	× ×	× ×	
Aux Messages	Local On/Off All Notes Off Active Sense Reset	× × × ×	× × × ×	

Notes

*P: Transmitted if GLOBAL "PCHG OUT" is On.

*C: Transmitted and received according to the setting of each controller if GLOBAL "CCHG I/O" is On.

*E: Transmitted if GLOBAL "SYEX OUT" is On. (Responses to Request messages are always transmitted regardless of the "SYEX OUT" setting.)

*1: In addition to messages specifically for this device, Device Inquiry is also supported.

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

○ : Yes
× : No

* Consult your local Korg distributor for more information on MIDI IMPLEMENTATION.

* Consultez ton revendeur pour en savoir plus sur l'équipement MIDI.


* Weitere Hinweise zur MIDI-Implementierung bekommst du bei deinem Händler bzw. dem Vertrieb.

* MIDI IMPLEMENTATIONの配布については、コルグお客様相談窓口へお問い合わせ下さい。

AX3000B Preset chart

Bank #	PROG NAME	PRE FX	DRIVE/AMP	CABINET	VOLUME PEDAL	MODULATION	DELAY	REVERB	CONTROL	FOR
1-1	STU+CHO		JAZZ			MULTI TAP CHORUS 			MOD TAP(SPEED)	AMP
1-2	STUDROCK		VALVE	STUDIO 1X15	(VOLUME) 		ANALOG DELAY		DELAY ON/OFF	AMP
1-3	STUSOCT	OCTAVE	JAZZ		(VOLUME) 	FILTRON		ROOM	MOD ON/OFF	AMP
1-4	SOLOSTU		JAZZ		(VOLUME) 		ANALOG DELAY	HALL	DELAY TAP(TIME)	AMP
2-1	FINGER	COMP	AC100			PITCH SHIFTER 		CANYON	ESS CONTROL2	AMP
2-2	GREENDAZ		SCOOPED		(VOLUME) 	MULTI TAP CHORUS		SLAP	REVERB ON/OFF	AMP
2-3	DUO PHAS		VALVE		(VOLUME) 	DUO PHASE		CANYON	MOD ON/OFF	AMP
2-4	SYNTH	SYNTH 	JAZZ				ANALOG DELAY	GARAGE	REVERB ON/OFF	AMP
3-1	D-TOWN	WAH 	VALVE				2TAP DELAY	STUDIO	ESS CONTROL1	AMP
3-2	JAZZ		JAZZ		(VOLUME) 	MULTI TAP CHORUS	MULTIHEAD	CHAMBER	DELAY ON/OFF	AMP
3-3	CELLOBOW	SLOW ATTACK	STUDIO		(VOLUME) 		REVERSE DELAY	HALL	DELAY ON/OFF	AMP
3-4	ESS FILT	SYNTH	JAZZ			FILTRON 		HALL	ESS CONTROL1	AMP
4-1	PICKER	LIMITER	SCOOPED		(VOLUME) 		FREEZ	SPRING	FREEZ	AMP
4-2	FRAGILE		JAZZ		(VOLUME) 	BI CHORUS	CROSS DELAY	CANYON	DELAY ON/OFF	AMP
4-3	PDL WAH	WAH 	VALVE	LA4X10				GARAGE	REVERB ON/OFF	AMP
4-4	REXX	COMP	SHRED DIST 				MOD DELAY	ROOM	DELAY ON/OFF	AMP
5-1	STUCFUNK	LIMITER	SCOOPED	METAL 4X10	(VOLUME) 				PRE FX ON/OFF	LINE
5-2	STUCROCK	EXCITER	CLASSIC	METAL 4X10	(VOLUME) 			HALL	REVERB ON/OFF	LINE
5-3	STUCHORD	EXCITER	LA STUDIO	LA 4X10	(VOLUME) 	MULTI TAP CHORUS		HALL	REVERB ON/OFF	LINE
5-4	STUSLY	COMP	ORANGE DIST	LA 4X10	(VOLUME) 				PRE FX ON/OFF	LINE
6-1	COUNTRY	COMP	GOLD PANEL	LA 1X18	(VOLUME) 			SLAP	PRE FX ON/OFF	LINE
6-2	ROCK	COMP	UK MAJOR	UK 4X15		PITCH SHIFTER 			ESS CONTROL2	LINE
6-3	FRETLESS	FRETLESS	JAZZ	JAZZ 1X15	(VOLUME) 			ARENA	REVERB ON/OFF	LINE
6-4	70'ZSYNT	SYNTH 	JAZZ	JAZZ 1X15				CHAMBER	REVERB ON/OFF	LINE
7-1	PEDL REV	COMP	LA STUDIO	LA 4X10			ANALOG DELAY	ROOM	DELAY ON/OFF	LINE
7-2	2112	COMP	UK MAJOR	UK 4X15	(VOLUME) 	MULTI TAP CHORUS		ARENA	REVERB ON/OFF	LINE
7-3	FUNK WAH	LIMITER	GOLD PANEL	MODERN 4X10		FILTRON 	REVERSE DELAY		DELAY ON/OFF	LINE
7-4	GEEZER		OCTAFUZZ 	LA 1X18			MULTIHEAD	ARENA	DELAY ON/OFF	LINE
8-1	SPACEMAN	OCTAVE	UK MAJOR			RANDOM FILTER 	CROSS DELAY		ESS CONTROL1	LINE/AMP
8-2	TALK	SYNTH	JAZZ		(VOLUME) 	TALK MOD	MOD DELAY	PLATE	DELAY TAP(TIME)	LINE/AMP
8-3	ONE STEP	LIMITER	VALVE	STUDIO 1X15		PITCH SHIFTER 		CANYON	ESS CONTROL1	LINE/AMP
8-4	SEQUENCE	SLOW ATTACK	VALVE2	CLASSIC 8X10		PITCH SHIFTER 	2TAP DELAY		ESS TRIGGER	LINE/AMP

 The effect is turned off. / L'effet est désactivé. / Der Effekt ist ausgeschaltet. / OFFのエフェクト

 The effect is turned on. / L'effet est activé. / Der Effekt ist eingeschaltet. / ONのエフェクト

 The effect is turned off, and is controlled by the expression pedal. / L'effet est désactivé et contrôlé par la pédale d'expression. / Der Effekt ist ausgeschaltet und wird durch das Expression-Pedal gesteuert. / EXPRESSION PEDAL でコントロールする OFFのエフェクト

 The effect is turned on, and is controlled by the expression pedal. / L'effet est activé et contrôlé par la pédale d'expression. / Der Effekt ist eingeschaltet und wird durch das Expression-Pedal gesteuert. / EXPRESSION PEDAL でコントロールする ONのエフェクト

 The effect is controlled by ess. / L'effet est contrôlé par le séquenceur ESS. / Der Effekt wird durch den ESS gesteuert. / ESS でコントロールするエフェクト