


MINI POPS-7

OWNER'S MANUAL

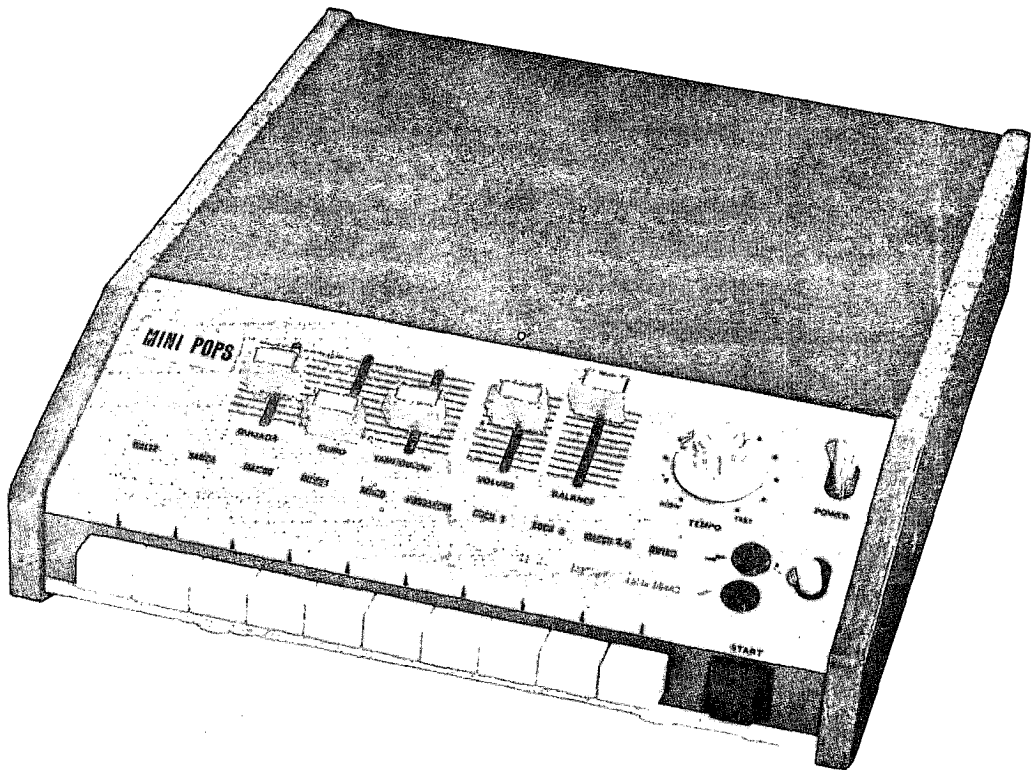


KEIO ELECTRONIC LABORATORY CORPORATION


17-7, OHKUBO 1 CHOME, SHINJUKU-KU

TOKYO, JAPAN

FRONT PANEL VIEW

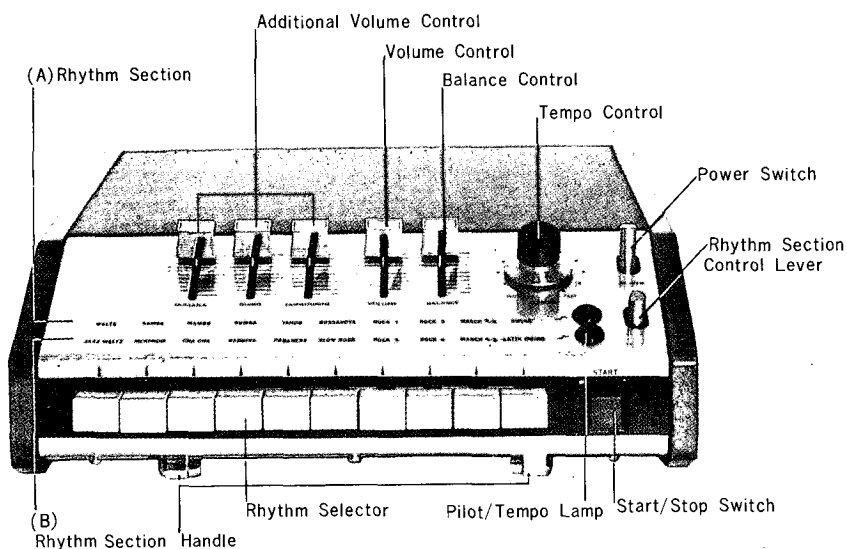

REAR PANEL VIEW

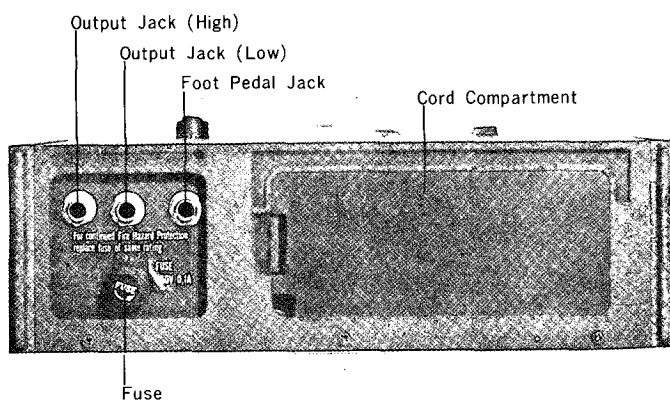

CONNECTION

1. Take the power cord, connector cord and foot pedal out of the cord compartment.
2. When connecting the Mini Pops to an electronic organ, plug the connector cord into the High Level output jack on the rear panel. To use any other amplifier, plug it into the low Level output jack.

Then plug the power cord into an AC outlet.

* High Level output 8Vp-p (Impedance 0~30k Ω)

* Low Level output 0.8Vp-p (Impedance 4.5k Ω)

OPERATION

1. Power Switch

Flick the lever down to ON to turn on the power.

2. Rhythm Section Control Lever

When this switch is pushed up the (A) rhythm section is in operation; push it down for the (B) section.

3. Rhythm Selector
Use this selector and the rhythm section control lever to select the desired rhythm.
4. Start/Stop Switch
Use this switch when you want the rhythm to start or to stop. The same switch provides both functions.
5. Tempo Control
Turn to the right for a faster tempo, to the left for slower.
6. Lamps
With the unit set in rhythm stop mode, these lamps serve a pilot function (showing the power is ON) and at the same time indicate which rhythm section is set; with the rhythm on, the lamp serves a tempo function, flashing the first beat of every measure according to the rhythm selected.
7. Additional Volume Controls
Special tonal effects and sounds can be blended in by setting the various tone controls for Quijada, Guiro and Tambourine.
8. Master Volume Control
Move this control up to increase the overall rhythm volume.
9. Tone Balance Control
Move this control up to accentuate the cymbal and maracas tones.

■ FOOT PEDAL OPERATION

Insert the foot pedal plug into the jack on the rear panel. The foot pedal will then operate as the start/stop switch, letting you control these functions with your foot.

■ PRECAUTIONS

- * Be certain the power switch is turned off whenever plugging in or unplugging the connector cord.
- * Try to place the unit in a location well removed from fluorescent lights, electric devices with thermostats, motors, etc., for such equipment can cause noise and rhythm fluctuations in the Mini Pops performance.
- * Be sure to protect the unit from excessive heat, humidity, dust and vibrations.

■ SPECIFICATIONS

RHYTHM:

Waltz	Jazz Waltz
Samba	Meringue
Mambo	Cha-cha
Rumba	Beguine
Tango	Habanera
Bossanova	Slow Rock
Rock 1	Rock 2
Rock 3	Rock 4
March 2/4	March 6/8
Swing	Latin Swing

PERCUSSIVE SOUND:

Bass Drum
Conga
Large Bongo
Small Bongo
Claves
Cow Bell
Snare Drum
Cymbal
Hi-Hat
Quijada (additional)
Guiro (")
Tambourine (")

OUTPUT VOLTAGE:

8V p-p(High), 0.8V p-p(Low)

POWER CONSUMPTION:

4W, AC 117V~240V

TRANSISTORS:

47 Transistors and 178 Diodes

DIMENSIONS:

Width: 10.3 in. Length: 12.4 in.
Height: 3.8 in.

WEIGHT:

8.25 lbs.

ACCESSORIES:

Connecting Cord with plugs
Foot Pedal

AVAILABLE RHYTHMS

<p>WALTZ</p> <p>CY1 ♩ v v ✕</p> <p>SD2 v ♩ ♩ ✕</p> <p>B D ♩ v v ✕</p>	<p>JAZZ WALTZ</p> <p>-CY1 ♩ v v ✕</p> <p>SD2 ♩ ♩ ♩ ✕</p> <p>B D ♩ v v ✕</p>
<p>SAMBA</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C B ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C O - v ♩ - v ♩</p> <p>B D ♩ v ♩ v ♩ v ♩ v</p>	<p>MERINGUE</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C B ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C O - v ♩ - v ♩</p> <p>B D ♩ ♩ ♩ v ♩ v ♩ v</p>
<p>MAMBO</p> <p>H H ♩ ♩ ♩ ✕</p> <p>C B ♩ ♩ ♩ ✕</p> <p>C O - v ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>	<p>CHA-CHA</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C B ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C O - v ♩ - v ♩</p> <p>B D ♩ ♩ ♩ ♩ ♩ ♩ ♩ ♩</p>
<p>RUMBA</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C L ♩ ♩ ♩ v v ♩ ♩ v</p> <p>S B v ♩ ♩ v v ♩ ♩ v</p> <p>L B ♩ ♩ ♩ v ♩ ♩ ♩ v</p> <p>C O - v ♩ - v ♩</p> <p>B D ♩ v ♩ ♩ ♩ v ♩ ♩</p>	<p>BEGUINE</p> <p>CY1 ♩ ♩ - ♩ ♩ -</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>S B ♩ ♩ ♩ ♩ ♩ ♩</p> <p>L B ♩ ♩ ♩ ♩ ♩ ♩</p> <p>C O - v ♩ - v ♩</p> <p>B D ♩ v ♩ ♩ ♩ v ♩ ♩</p>
<p>TANGO</p> <p>CY1 - v ♩ ♩ ✕</p> <p>SD2 - v ♩ ♩ ✕</p> <p>H H ♩ ♩ ♩ ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>	<p>HABANERA</p> <p>CY1 ♩ v - ✕</p> <p>H H ♩ ♩ ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>
<p>BOSSANOVA</p> <p>H H ♩ ♩ ♩ ♩ ♩ ♩</p> <p>R S ♩ ♩ ♩ v v ♩ ♩ v</p> <p>B D ♩ ♩ ♩ ♩ ♩ ♩ ♩ ♩</p>	<p>SLOW ROCK</p> <p>H H ³ ♩ ³ ♩ ³ ♩ ³ ♩ ✕</p> <p>R S v ♩ v ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ♩ ♩</p>
<p>ROCK 1</p> <p>H H ♩ ♩ ♩ ✕</p> <p>SD1 v ♩ v ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>	<p>ROCK 2</p> <p>H H ♩ ♩ ♩ ✕</p> <p>SD1 v ♩ ♩ v ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>
<p>ROCK 3</p> <p>H H ♩ ♩ ♩ ✕</p> <p>SD1 v ♩ v ♩ ✕</p> <p>SD2 v ♩ ♩ ♩ v ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>	<p>ROCK 4</p> <p>H H ♩ ♩ ♩ ✕</p> <p>SD1 v ♩ ♩ v ✕</p> <p>SD2 v ♩ ♩ v ✕</p> <p>B D ♩ v ♩ ♩ ✕</p>
<p>MARCH 2/4</p> <p>SD2 v ♩ v ♩ ✕</p> <p>B D ♩ v ♩ v ✕</p>	<p>MARCH 6/8</p> <p>CY2 ♩ ♩ ♩ ✕</p> <p>B D ♩ ♩ ♩ ✕</p>
<p>SWING</p> <p>CY2 ♩ ♩ ♩ ✕</p> <p>SD2 v ♩ v ♩ ✕</p> <p>B D ♩ ♩ ♩ ♩ ✕</p>	<p>LATIN SWING</p> <p>CY2 ♩ ♩ ♩ ✕</p> <p>S B v ♩ - ✕</p> <p>C O - v ♩ ✕</p> <p>B D ♩ v ♩ ♩ ✕</p>

NOTE: BD: BASS DRUM, CO: CONGA, LB: LARGE BONGO, SB: SMALL BONGO, CL: CLAVES,
CB: COW BELL, HH: HI-HAT, SD: SNARE DRUM, CY: CYMBAL, RS: RIM-SHOT