

Function...		Transmitted	Received	Remarks
<b>Basic Channel</b>	Default Change	1 1—16	× ×	
<b>Mode</b>	Default Messages Altered	× *****	× × *****	
<b>Note Number</b>	True Voice	15—113 *****	***** *****	
<b>Velocity</b>	Note On Note Off	○ 9n, V=1—127 × V=64	× ×	
<b>After touch</b>	Key's Channel	× ×	× ×	
<b>Pitch Bend</b>		×	×	
<b>Control Change</b>				
	0	○	×	Bank Select (MSB) *1
	7	○	×	Volume *1
	32	○	×	Bank Select (LSB) *1
	64	○	×	Damper Pedal *1
	66	○	×	Sostenuto Pedal *1
	67	○	×	Soft Pedal *1
	121	○	×	Reset All Control *1
<b>Program Change</b>	Ture Number	○ *****	× ×	0, 1, 4-7, 11, 16, 19, 48 *2
<b>System Exclusive</b>		×	×	
<b>System Common</b>	Song Position Song Select Tune Request	× × ×	× × ×	
<b>System Realtime</b>	Clock Command	× ×	× ×	
<b>Aux Messages</b>	Local On/Off All Notes Off Active Sense System Reset	× ○ ○ ×	× × × ×	

**Notes:** \*1 Transmitted if control changes are enabled.  
\*2 Transmitted if Program changes are enabled.

**Mode 1: Omni On, Poly**  
**Mode 3: Omni Off, Poly**

**Mode 2: Omni On, Mono**  
**Mode 4: Omni Off, Mono**

○ : Yes  
× : No

Consult your local Korg distributor for more information on MIDI implementation.