

iS50B FAQs

What styles come on each iS Series disk?

What are the bank change values?

What styles come on each i Series disk?

iS Series Style Disks

(Disks noted with a * are included in the “Styles Bundle Pack”)

<u>iS 01 Latin 1</u> Cumbia Merengue Rumba Calypso Gipsy Meneaito Bayon Limbo	<u>iS 02 Funky*</u> Funky 1 Funky 2 Funky 3 Funky 4 Funq 1 Funq 2 Funq 3 Funq 4	<u>iS 03 The XX Century Dance</u> Frankie Snap Corona Dance '60 Dance '70 Dance '80 Dance '90	<u>iS 04 Rap & Reggae*</u> USA Rap UK Rap Jô Rap Art31 Rap Bob Marley 1 Bob Marley 2 UB 40 ReggaeNight
<u>iS 05 90's Dance*</u> Hit-House John Arabian House U2 Alexia R. Miles Garden Living Joy	<u>iS 06 Rock *</u> <u>Around the World</u> U2 Groove Irish Rock Red Hair Gloria Canadian Rock Blues Funk Slow Pop 16 Beat Pop	<u>iS 07 Liscio 1 Traditional 1*</u> Valzer Polka Fox Trot Beguine Valzer2 Polka2 Mazurka Tango	<u>iS 08 Big Band</u> Med.Swing Boogie SlowSwing BigBand1 Slow BigBand Big Band 2 Big Band 3
<u>iS 09 Latin 2</u> Pasodoble Cumbia Samba Merengue Cha Cha Bossa Mambo Samba 2	<u>iS 10 8/16 Beat 1</u> 8 Allegro 8 Disco Beat 8 Medium Beat 8 Medium Disco 16Beat John 1 16 Beat John 2 Honky John 8 Beat John	iS 11 Sala Da Ballo (Traditional 2)* Beguine Fox Trot Moderato Triplet Samba Zibaldone WienWaltz Zibaldone 2	iS 12 Italian 60' & American 50' Italian 6/8 Rumba Rock Hully Gully Twist Italy Rock 1 Rock 2 Boogie 2 Shuffle
<u>iS 13 Fusion, Soul, R & B</u> Jaco Modern Fusion Fusion Funk Slow Fusion R&B2 R&B3 Soul Rock2	<u>iS 14 Jazz & Country*</u> Jazz Waltz Dorian Swing Shuffle Big Band2 Country 3/4 Achybreak Shuffle City Loong Cool WM	<u>iS 15 People Dance*</u> Tiki Dance Gipsy Dance Woolf Dance Medley Dance Mod. Swing Slow Rock 2 Folk Ballad Gipsy Kings	<u>iS 16 8/16 Beat 2*</u> IK 16 Beat Beat 1 IK 16 Beat 2 IK 16 Beat 3 IK 8 Beat 8 Beat 8 Medium Beat 16 Beat Eight Rock
<u>IS 18 - Piano & Disco Bar*</u> Slow Style Begin Slow Rock Slow Band Jamiro 1 Space Jamiro 2 Jamiroquai	<u>IS 19 - Hip Hop*</u> Blur Oasis Englpropok Verve Back Street Amer Paphop Hdr Softhip Slw & Fst Hhp	<u>IS 23 - Piano Bar Styles*</u> Lucio Eros Gerardina Eros 2 Cattivi Rainers Hair Alias	<u>IS 25 - Beat & Rock*</u> Slow 8 Beat Slow 2 Enigma Rock GB 8 Beat 808 16 Beat 808 I 16 Beat 808 III 16 Beat Shuffle 808



Bank Change Messages For Korg Products

Most sequencers have an event edit mode, which allows inputting controller messages. Bank change messages require these events: Beat one, tick one: Controller 0 with its value - Beat one, tick two: Controller 32 with its value - Beat one, tick three: Program change. Make sure that Program Change and Exclusive filters are set to enable (ENA) to receive these commands. Note: These listing covers all possible bank changes in the product lines specified for each chart. Since some models don't have all of the mentioned banks, some messages will not be received.

X Series/N364/264/Trinity Series/ Z1/Z1EX

BANK A			BANK B			BANK C		
Message	Value		Message	Value		Message	Value	
Controller 0	0		Controller 0	0		Controller 0	0	
Controller 32	0		Controller 32	1		Controller 32	2	
Program Change	0-99 (0-127)		Program Change	0-99 (0-127)		Program Change	0-99 (0-127)	
BANK D			BANK S/M (Trinity)			GM BANK (X and N Series)		
Message	Value		Message	Value		Message	Value	
Controller 0	0		Controller 0	0		Controller 0	56	
Controller 32	3		Controller 32	4		Controller 32	0	
Program Change	0-99 (0-127)		Program Change	0-99 (0-127)		Program Change	1-128	
			GM DRUM BANK (X and N Series)					
Message	Value		Message	Value				
Controller 0	62		Controller 0	62				
Controller 32	0		Controller 32	0				
Program Change	*		Program Change	*				

Triton Classic/Studio/Extreme/Rack/Le/Karma

BANK INT-A				BANK INT-B				BANK INT-C			
Message	Value			Message	Value			Message	Value		
Bank Map	(GM)	(Korg)		Bank Map	(GM)	(Korg)		Bank Map	(GM)	(Korg)	
Controller 0	63	0		Controller 0	63	0		Controller 0	63	0	
Controller 32	0	0		Controller 32	1	1		Controller 32	2	2	
Program Change	0-127	0-127		Program Change	0-127	0-127		Program Change	0-127	0-127	
BANK INT-D				BANK INT-E				BANK INT-F			
Message	Value			Message	Value			Message	Value		
Bank Map	(GM)	(Korg)		Bank Map	(GM)	(Korg)		Bank Map	(GM)	(Korg)	
Controller 0	63	0		Controller 0	63	0		Controller 0	63	0	
Controller 32	3	3		Controller 32	4	4		Controller 32	5	5	
Program Change	0-127	0-127		Program Change	0-127	0-127		Program Change	0-127	0-127	

BANK EXB-A			BANK EXB-B			BANK EXB-C		
<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>	
Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)
Controller 0	63	0	Controller 0	63	0	Controller 0	63	0
Controller 32	8	8	Controller 32	9	9	Controller 32	10	10
Program Change	0-127	0-127	Program Change	0-127	0-127	Program Change	0-127	0-127
BANK EXB-D			BANK EXB-E			BANK EXB-F		
<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>	
Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)
Controller 0	63	0	Controller 0	63	0	Controller 0	63	0
Controller 32	11	11	Controller 32	12	12	Controller 32	13	13
Program Change	0-127	0-127	Program Change	0-127	0-127	Program Change	0-127	0-127
BANK EXB-G			BANK EXB-H			GM BANK		
<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>	
Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)
Controller 0	63	0	Controller 0	63	0	Controller 0	56 or 121	56 or 121
Controller 32	14	14	Controller 32	15	15	Controller 32	0	0
Program Change	0-127	0-127	Program Change	0-127	0-127	Program Change	0-127	0-127
GM DRUM BANK			GM2 (Banks 1 through 9)					
<i>Message</i>	<i>Value</i>		<i>Message</i>	<i>Value</i>				
Bank Map	(GM)	(Korg)	Bank Map	(GM)	(Korg)			
Controller 0	62 or 120	62 or 120	Controller 0	121	121			
Controller 32	0	0	Controller 32	1-9	1-9			
Program Change	(See GM Drum Program Conversion chart)		Program Change	0-127	0-127			

i-Series (i5, i5M i3, i2, i1, iX300, XC Series)

BANK A/B		BANK C/D		BANK E/F,User		DRUMS Dr1-Dr8	
<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>
Controller 0	0	Controller 0	0	Controller 0	0	Controller 0	0
Controller 32	0	Controller 32	1	Controller 32	2	Controller 32	3
Program Change	0-127	Program Change	0-127	Program Change	0-127	Program Change	0-7
(Numbers: 0-63 = A11-A88, 64-127 = B11-88)		(Numbers: 0-63 = C11-C88, 64-127 = D11-D88)		(Numbers: 0-63 = E11-E88, 64-127 = F11-F88)		(Numbers: 0-7 = Dr1-Dr8)	

iS-Series/i40M

BANK A/B		BANK C/D		BANK E/F User-Drum	
<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>
Controller 0	0	Controller 0	0	Controller 0	0
Controller 32	0	Controller 32	1	Controller 32	2
Program Change	0-127	Program Change	0-127	Program Change	0-127
(Numbers: 0-63 = A11-A88, 64-127 = B11-88)		(Numbers: 0-63 = C11-C88, 64-127 = D11-D88)		(Numbers: 0-63 = E11-E88, 64-127 = F11-F88)	

I30

BANK A/B		BANK C/D		BANK E	
<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>
Controller 0	0	Controller 0	0	Controller 0	0
Controller 32	0	Controller 32	1	Controller 32	2
Program Change	0-127	Program Change	0-127	Program Change	0-63
(Numbers: 0-63 = A11-A88, 64-127 = B11-88)		(Numbers: 0-63 = C11-C88, 64-127 = D11-D88)		(Numbers: 0-63 = E11-E88)	

BANK F		BANK G		BANK R (Drums)	
<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>	<i>Message</i>	<i>Value</i>
Controller 0	0	Controller 0	0	Controller 0	0
Controller 32	3	Controller 32	3	Controller 32	4
Program Change	0-63	Program Change	64-127	Program Change	0-127
(Numbers: 0-63 = F11-F88)		(Numbers: 64-127 = G11-G88)			
*i30 GM Drum Bank Program Change Conversion					
Program Changes		Drum Kits			
00 - 15 -- Dr 11		120 -- Dr 21			
16 - 17 -- Dr 12		121 -- Dr 22			
25 -- Dr 13		122 -- Dr 23			
32 - 39 -- Dr 14		123 -- Dr 24			
40 -47 -- Dr 15		124 -- Dr 25			
64 - 71 -- Dr 16		125 -- Dr 26			
26 - 31 -- Dr 17		126 -- Dr 27			
48 - 55 -- Dr 18		127 -- Dr 28			

N5EX/N1/N1R/NS5R/NX5R Bank Changes

Bank Name	Bank Select (MSB:LSB)
GM-a	00:00(GS/XG)
	00:01(GS)
r:01	01:xx
r:02	02:xx
r:03	03:xx
r:04	04:xx
r:05	05:xx
r:06	06:xx
r:07	07:xx
r:08	08:xx
r:09	09:xx
r:10	10:xx
r:11	11:xx
r:16	16:xx
r:17	17:xx
r:18	18:xx
r:19	19:xx
r:24	24:xx
r:25	25:xx
r:26	26:xx
r:32	32:xx
r:33	33:xx
r:40	40:xx
r:CM	125:xx
	127:xx(GS)
y:01	00:01(XG)
y:03	0:03
y:06	0:06
y:08	0:08
y:12	00:12
y:14	00:14
y:16	0:16
y:17	0:17
y:18	0:18
y:19	0:19
y:20	0:20

Bank	Bank Select
y:24	0:24
y:25	0:25
y:27	00:27
y:28	00:28
y:32	0:32
y:33	0:33
y:34	0:34
y:35	0:35
y:36	0:36
y:37	0:37
y:38	0:38
y:39	0:39
y:40	0:40
y:41	0:41
y:42	00:42
y:43	00:43
y:45	00:45
y:64	0:64
y:65	0:65
y:66	0:66
y:67	0:67
y:68	0:68
y:69	0:69
y:70	0:70
y:71	0:71
y:72	0:72
y:96	00:96
y:97	00:97
y:98	00:98
y:99	00:99
y100	00:100
y101	00:101
ySFX	64:xx
GM-b	56:00
	57:00(05)
PrgU	80:xx
PrgA	81:xx

Bank Name	Bank Select (MSB:LSB)
PrgB	82:xx
PrgC	83:xx
CmbU	88:xx
CmbA	89:xx
CmbB	90:xx
CmbC	91:xx
yDr1	126:xx
yDr2	127:xx(XG)
	120:xx(XG)
rDrm	61:xx
	120:xx(GS)
kDrm	62:xx
	120:xx(05)
****	63:xx

- * (GS) : after GS Reset
- * (XG) : after XG System ON
- * (05) : 05R/W Ma

N5EX/N1/N1R/NS5R/NX5R Drum Banks

yDr2' Bank (Bank MSB=127) Drum Kit List (Drum Bank)		'rDrm' Bank (Bank MSB=61) Drum Kit List (Drum Bank)		'kDrm' Bank (BankMSB=62) Drum Kit List (Drum Bank)	
<u>Program No.</u>	<u>Drum Kit Name</u>	<u>Program No.</u>	<u>Drum Kit Name</u>	<u>Program No.</u>	<u>Drum Kit Name</u>
(PC# xxh)		(PC# xxh)		(PC# xxh)	
1 (00h)	Standard	1 (00h)	STANDARD	1(00h)...16(0Eh)	GM Kit
2 (01h)	Standard	2 (01h)	STANDARD	17(10h)...24(17h)	Power Kit
9 (08h)	Room	9 (08h)	ROOM	25(18h)	Dance Kit
17 (10h)	Rock	17 (10h)	POWER	26(19h)	Analog Kit
25 (18h)	Electro	25 (18h)	ELECTRONIC	27(1Ah)...32(1Fh)	Dance Kit
26 (19h)	Analog	26 (19h)	ANALOG	33(20h)...40(27h)	Jazz Kit
33 (20h)	Jazz	27 (1Ah)	DANCE	41(28h)...48(2Fh)	Brush Kit
41 (28h)	Brush	33 (20h)	JAZZ	49(30h)...56(37h)	Orch Kit
49 (30h)	Classic	41 (28h)	BRUSH	57(38h)...64(3Fh)	GM Kit
		49 (30h)	ORCHESTRA	65(40h)...72(47h)	Perc Kit
'yDr1' Bank (Bank MSB=126) Drum Kit List (Drum Bank)		50 (31h)	ETHNIC	73(48h)	User Kit 1
<u>Program No.</u>	<u>Drum Kit Name</u>	51 (32h)	KICK&SNARE	74(49h)	User Kit 2
(PC# xxh)		57 (38h)	SFX	75(4Ah)..128(7Fh)	GM Kit
1 (00h)	SFX 1	128 (7Fh)	C/M		
2 (01h)	SFX 2				



Contents of *i Series* Style Disks

IFD-01 Funk	Band Funk 70's Funk 80's Funk	IFD-06 House/Rave	Housing UK Formulate! Boom Chiki Respect #
IFD-02 Latin 1 (Caribbean)	Mozambique Merengue Latin Afro	IFD-07 16 Beat	16 beat USA 16 beat Funk 16 beat 80's
IFD-03 8 Beat (Rock)	UK Rock HeavyMetal TwinDrRock	IFD-08 Jazz	Bebop Hard Bop Funky Jazz
IFD-04 Reggae	BritishReg Roots Dub	IFD-09 Latin 2 (Brazil)	Rio Samba 2 Bahia
IFD-05 3/4•6/8 Triplet	6/8 Jazz Shuffl Rock 3/4 Pop	IFD-10 World Music	Afro Pop Gypsy Pop Rai

KSDI-20 Italian Keyboard 1	16 Beat 1 16 Beat 2 16 Beat 3 8 Beat 1	KSDI-30 Dance	Alexia Garden R. Miles Living Joy
KSDI-36 Funky Trunk	Funk 1 Funk 2 Funk 3 Funk 4	KSDI-41 People Dance	Tiky Style Gipsy Dance Medley Wolf Dance
KSDI-44 Rap & Rappers	U.S.A. Rap UK Rap Jo' Rap Art31 Rap	KDSI-48 Disco Bar	Jamiro 1 Jamiro 2 Jamiro 3 Space
KSDI-50 Pop and Rock	U2 Groove Irish Rock Red Hair Gloria		

KSSD13		KSSD14		KSSD15	
Country Country 3/4 Achy Break Shuffle City Long Cool	House Dance Housing UK Formulate Boom Chiki Respect #	Spain Merengue Sevillanas Pasodoble	Turkish 1 Dans Dueyek Arab 5/8	Wedding Dance 1 Rhumba Weiner Waltz Paso Dob Jive	French Set 1 Musette 1 Paso Doble Musette 2 Tango
General Dance 1 Wein. Waltz Polka 2	Modern Dance Kemp Flp2 6/8 FolkBld	Sweden 1 DanskVals DanskVikin DanskSwing	Turkish 2 9/8 Sarkis Oyunhava Vals 7/8	Jazz Set 2 Dorian Big Band 2 Swing Lois Jazz Waltz 2	French Set 2 Valse Mazurka Polka
General Dance 2 Laendler Polka 3 Polka Beat PolkaSwng	Rock 1 Pure Scorp's Rox BonJovee	Traditional Dance W. Waltz J. Last Disco Fx1 Flipprs 1			