

Function...		Transmitted	Received	Remarks
Basic Channel	Default Change	1 1—16	× ×	
Mode	Default Messages Altered	× *****	× × *****	
Note Number	True Voice	15—113 *****	***** *****	
Velocity	Note On Note Off	○ 9n, V=1—127 × V=64	× ×	
After touch	Key's Channel	× ×	× ×	
Pitch Bend		×	×	
Control Change				
	0	○	×	Bank Select (MSB) *1
	7	○	×	Volume *1
	32	○	×	Bank Select (LSB) *1
	64	○	×	Damper Pedal *1
	121	○	×	Reset All Control *1
Program Change	Ture Number	○ *****	× ×	0, 1, 4-7, 11, 16, 19, 48 *2
System Exclusive		×	×	
System Common	Song Position Song Select Tune Request	× × ×	× × ×	
System Realtime	Clock Command	× ×	× ×	
Aux Messages	Local On/Off All Notes Off Active Sense System Reset	× ○ ○ ×	× × × ×	
Notes:	*1 Transmitted if control changes are enabled. *2 Transmitted if Program changes are enabled.			

Mode 1: Omni On, Poly
Mode 3: Omni Off, Poly

Mode 2: Omni On, Mono
Mode 4: Omni Off, Mono

○ : Yes
× : No

Consult your local Korg distributor for more information on MIDI implementation.