

New features in system version 1.1.0

The new system version 1.1.0 for the drumlogue adds the following items.

- Solo function and solo latch
- Mute latch
- Shift latch
- Display feature to indicate the original value
- Other improvements to operations and accuracy


Note: See the document included with the System Updater software for how to update the system. <https://www.korg.com/support/download/>

Solo, solo latch

Solo

This solos the selected parts.

1. Hold down the **SHIFT** and **MUTE** buttons and press buttons 1–13 (BD–USER parts).
The parts you pressed are soloed.
2. To cancel (unsolo) the solo feature, hold down the **SHIFT** and **MUTE** buttons and press buttons 1–13 that are soloed.

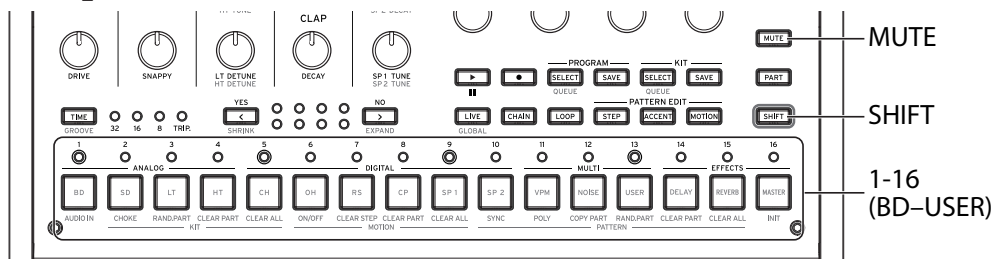

Solo latch

Solo latch automatically keeps the **SHIFT** and **MUTE** buttons held down (in step 1 above) so that you can solo a part just by pressing buttons 1–13.

1. Press the **MUTE** button quickly twice while holding down the **SHIFT** button (the **SHIFT** button lights up, and the **MUTE** button blinks).
The unit enters solo latch mode.
2. Press buttons 1–13 to solo (or unsolo) them.
3. To cancel the solo latch feature, press the **SHIFT**, **MUTE** or **PART** button, or access a different mode.

Mute latch

To mute a part, hold down the MUTE button and press buttons 1–13 (BD–USER parts).

Mute latch automatically keeps the MUTE button held down (as mentioned above), so that you can mute a part just by pressing buttons 1–13.

1. **Press the MUTE button quickly twice (the MUTE button blinks).**
The unit enters mute latch mode.
2. **Press buttons 1–13 to mute (or unmute) the parts.**
3. **To cancel the mute latch feature, press the SHIFT, MUTE or PART button, or access a different mode.**

Shift latch

Shift latch automatically keeps the SHIFT button held down, making it easier to perform knob and button operations that require the SHIFT button to be held down.

1. **Press the SHIFT button quickly twice. The unit enters shift latch mode.**
2. **To cancel the shift latch feature, press the SHIFT, MUTE or PART button, or access GLOBAL mode.**
 - ▲ Shift latch cannot be used in MOTION mode to operate the shift function for buttons 1–16. The motion edit for each step is given priority.

Display feature to indicate the original value

When the edited value is the same as the value saved for a parameter, “” is shown.

“” or “” indicates that the edited value is close to the saved value.

BASS DRUM		PARAMETERS		1/2	
SWEEP	SW. TIME	HOLD	ATTACK		
44.5%	← 2.0% *	0	→ 50.0% *		

KORG INC.

4015-2 Yanokuchi, Inagi-City, Tokyo 206-0812 JAPAN

©2023 KORG INC.

www.korg.com

Published 01/2023