

REMOTE EDITOR

RE1

OWNER'S MANUAL

①

KORG®

Thank you for purchasing the Korg RE1 remote editor. To enjoy long and trouble-free use, please read this manual carefully.

PRECAUTIONS

■ ENVIRONMENT

Avoid using this unit in environments where it will be exposed to the following conditions:

- Direct sunlight
- High temperature or humidity
- Dust or sand
- Excessive vibration

Using your unit in the following kinds of locations may generate noise or cause erroneous operation, so please be careful.

- Near fluorescent lights or CRTs (in TVs, etc.)

■ POWER SUPPLY

Use this unit only with the rated AC voltage. If you intend to use this unit in areas where the voltage is different from the rated AC voltage, consult your KORG dealer about a suitable voltage transformer unit.

Do not plug the unit into the same outlet used for devices which generate noise or which have a large power consumption, such as motors or dimmers.

■ INTERFERENCE WITH OTHER APPLIANCES

This unit uses microprocessor circuitry that may cause interference with nearby radio or TV receivers. If problems occur, use at a greater distance from the radio or TV.

■ HANDLE GENTLY

Although this unit is designed and constructed to KORG's high standards, the use of excessive force may cause damage to its keys and knobs.

■ CLEANING

Use only a soft, dry cloth to clean the exterior of this unit. Never use benzene, volatile cleaners or solvents, polish or cleaning compounds.

■ OWNER'S MANUAL

The RE1 is a sophisticated digital music device with many functions. Therefore, we suggest that you keep this manual handy at all times, for reference.

NOTICE

KORG products are manufactured under strict specifications and voltages required by each country. These products are warranted by the KORG distributor only in each country. Any KORG product not sold with a warranty card or carrying a serial number disqualifies the product sold from the manufacturer's/distributor's warranty and liability. This requirement is for your own protection and safety.

KORG® KORG INC.

15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo, Japan.

Ⓔ

© KORG INC. 1993 0505 GH CR Printed in Japan

Using the RE1 increases the efficiency of editing and other operations on Korg equipment (such as the M3R) that has a REMOTE jack for the RE1. (Some equipment may have a REMOTE jack which is not intended for the RE1, so please check carefully.)

- ① With the device's power turned off, connect the special cable.
- ② Turn the power of the device on.

* The RE1 does not have to be connected to a power supply. Power is supplied to it through the remote cable connecting it to the device.

☆ For instructions on use when connected, refer to the owners manual of the device to which you will be connecting the RE1.



Front panel

- ① LCD
This display indicates the operation being performed.
- ② A—H keys
- ③ A—H sliders
- ④ UP/DOWN keys
- ⑤ PAGE+/PAGE- keys
These keys are used when editing, etc.
- ⑥ Function keys (F keys)
The function of these keys will depend on the device to which the RE1 is connected. (A set of labels indicating the functions of F1—F6 for each device is included.)
- ⑦ INT/CARD/0—9 keys
These keys are used to select programs and combinations, or when editing.

