


KORG DIGITAL PIANO

CONCERT

C-3200

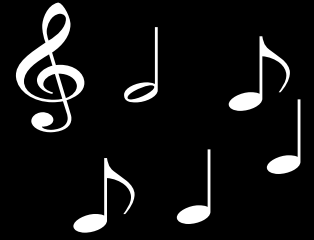

Thank you for purchasing the Korg Digital Piano Concert C-3200. To ensure long, trouble-free operation, please read this manual carefully.

Owner's Manual

Table of contents

Main features	4	6. Changing the key (Transposing)	15
Parts of the C-3200 and their function	4	7. Making fine adjustments to the pitch	15
Switch and key functions	6	8. Selecting a temperament	16
1. Sound selector switches	6	9. Storing your settings	16
2. Recorder section	6	10. Restoring the factory settings	16
3. Keyboard	6	Recording and playing-back your performance	17
Getting ready to play	7	1. Recording your performance	17
1. Before you start playing	7	2. Listening to a song you recorded	18
2. Using headphones with the C-3200	7	3. Erasing parts	18
3. Using the music stand	7	Connecting to other devices	19
Listening to the demo songs	8	1. Connections with a synthesizer, or audio system	19
1. To listen to all the demo songs	8	2. Connections with MIDI devices	19
2. To listen to an individual demo song	8	Troubleshooting	23
3. To pause the Demo playback	9	Specifications	23
4. Practicing along with a demo song	9	Assembling the stand (STD-3200)	24
5. Adjusting the tempo of the demo playback	9	Cautions for assembly	24
Playing the C-3200	10	Assembly procedure	24
1. Selecting sounds	10	Other cautions	26
2. Adding effects to the sound	12	MIDI Implementation Chart	27
3. Using the pedals	12		
4. Playing along with the metronome	13		
5. Selecting the Touch Response Curve	14		



KORG


IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Clean only with dry cloth.
- Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. (for U.S.A. and Canada)
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Turning of the power switch does not completely isolate this product from the power line so remove the plug from the socket if not using it for extended periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not install this equipment on the far position from wall outlet and/or convenience receptacle.
- Do not install this equipment in a confined space such as a box for the conveyance or similar unit.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with this apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE—NE PAS OUVRIR.		
注意	感電の恐れあり、キャビネットをあけるな	

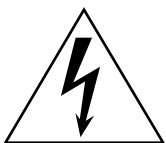

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

THE FCC REGULATION WARNING (for U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CE mark for European Harmonized Standards

CE mark which is attached to our company's products of AC mains operated apparatus until December 31, 1996 means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC).

And, CE mark which is attached after January 1, 1997 means it conforms to EMC Directive (89/336/EEC), CE mark Directive (93/68/EEC) and Low Voltage Directive (73/23/EEC).

Also, CE mark which is attached to our company's products of Battery operated apparatus means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC).

- Other product names and company names are registered trademarks and trademarks of their respective owners.

About Recorder data

Since it is possible for the contents of memory to be accidentally lost, you should save important data on an external data filer (storage device) etc.

Korg will accept no responsibility for any damages that may result from loss of data.

Conventions in this manual



This symbol indicates a caution.

(☞p.**)

This indicates a reference page.



This indicates an explanation concerning a setting.

Main features

Weighted Hammer Action

The C-3200 features the RH2 (Real Weighted Hammer Action 2) keyboard, which varies the resistance of the keyboard in four stages, just as on a grand piano.

Rich array of sounds (☞p.10)

Choose from eight high-quality sounds developed by Korg, including a superb concert grand piano. There is also an additional Bass sound. You can use the Layer or Split functions to play two sounds at the same time. The stereo sampling tone generator provides a concert grand piano that not only sounds rich, but also reproduces a spacious ambience.

Effects (☞p.12)

The built-in digital effects provide both Reverb, which can recreate the ambience of a concert hall, and Chorus to add fullness and enhance the stereo imaging of the sound.

Pedal effects (☞p.12)

The C-3200 provides the same three pedals as a grand piano, controlling the soft, sostenuto, and damper functions respectively. The damper pedal simulates the natural string resonances of an acoustic piano. Both the damper pedal and the soft pedal let you vary the amount of the effect by how far you press down on the pedal (“half-pedal” function).

Metronome (☞p.13)

The built-in metronome provides a steady beat for practice. You can set the time signature, tempo, and volume, and can even select a different sound for the downbeat.

Recorder (☞p.17)

You can record, overdub and play back your own performance using the built-in recorder. The functions are easier to use than a traditional tape recorder.

Touch control (☞p.14)

Three touch curves allow you to tailor the keyboard response to your own playing style.

Temperaments (☞p.16)

In addition to the traditional equal temperament, you can also select one of the two classical temperaments (Kirnberger or Werckmeister) for historically authentic performances.



Adjustable pitch (☞p.15)

You can use Transpose to transpose the pitch in semitone steps, and Pitch Control to make fine adjustments to the pitch.

MIDI (☞p.19)

“MIDI” is a world-wide standard that allows performance data to be transferred between electronic musical instruments and computers. Via the C-3200’s MIDI connectors, it can control (or be controlled by) another MIDI device, and can even be used as a 16-part multi-timbral tone generator.

Parts of the C-3200 and their function

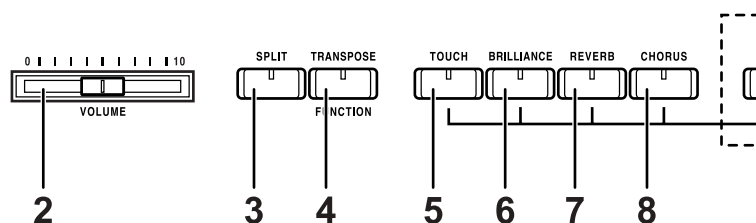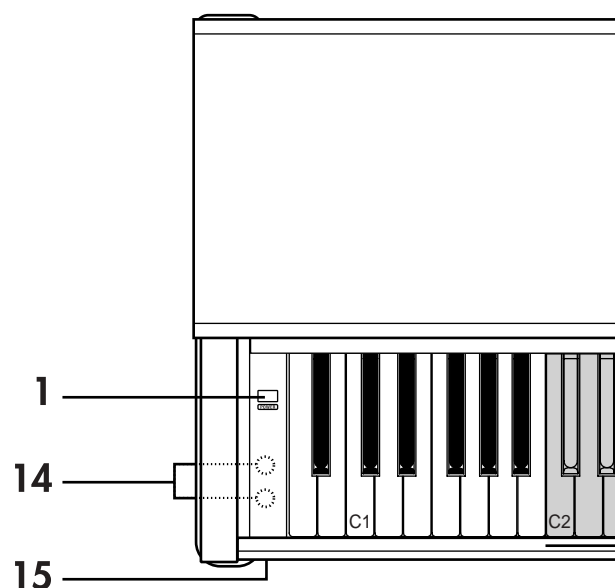

1. Power switch

This switch turns the power on and off (☞p.7).

2. Volume slider

This slider controls the volume level of the speakers, headphone jacks, and output jacks (☞p.7).

3. Split switch

This switch splits the keyboard into two areas (Upper and Lower) and allows a separate sound to be assigned to each one. By default, the Bass sound is assigned to the Lower area, but any sound can be selected. (☞p.11).

4. Transpose/Function switch


Holding down this switch while pressing other switches or keys will allow you to access the Transpose feature (☞p.15), make MIDI-related settings (☞p.19) and various other settings.

5. Touch switch

This switch selects the touch response curve of the keyboard (☞p.14).

6. Brilliance switch

This controls the overall brightness of the tone (☞p.12).

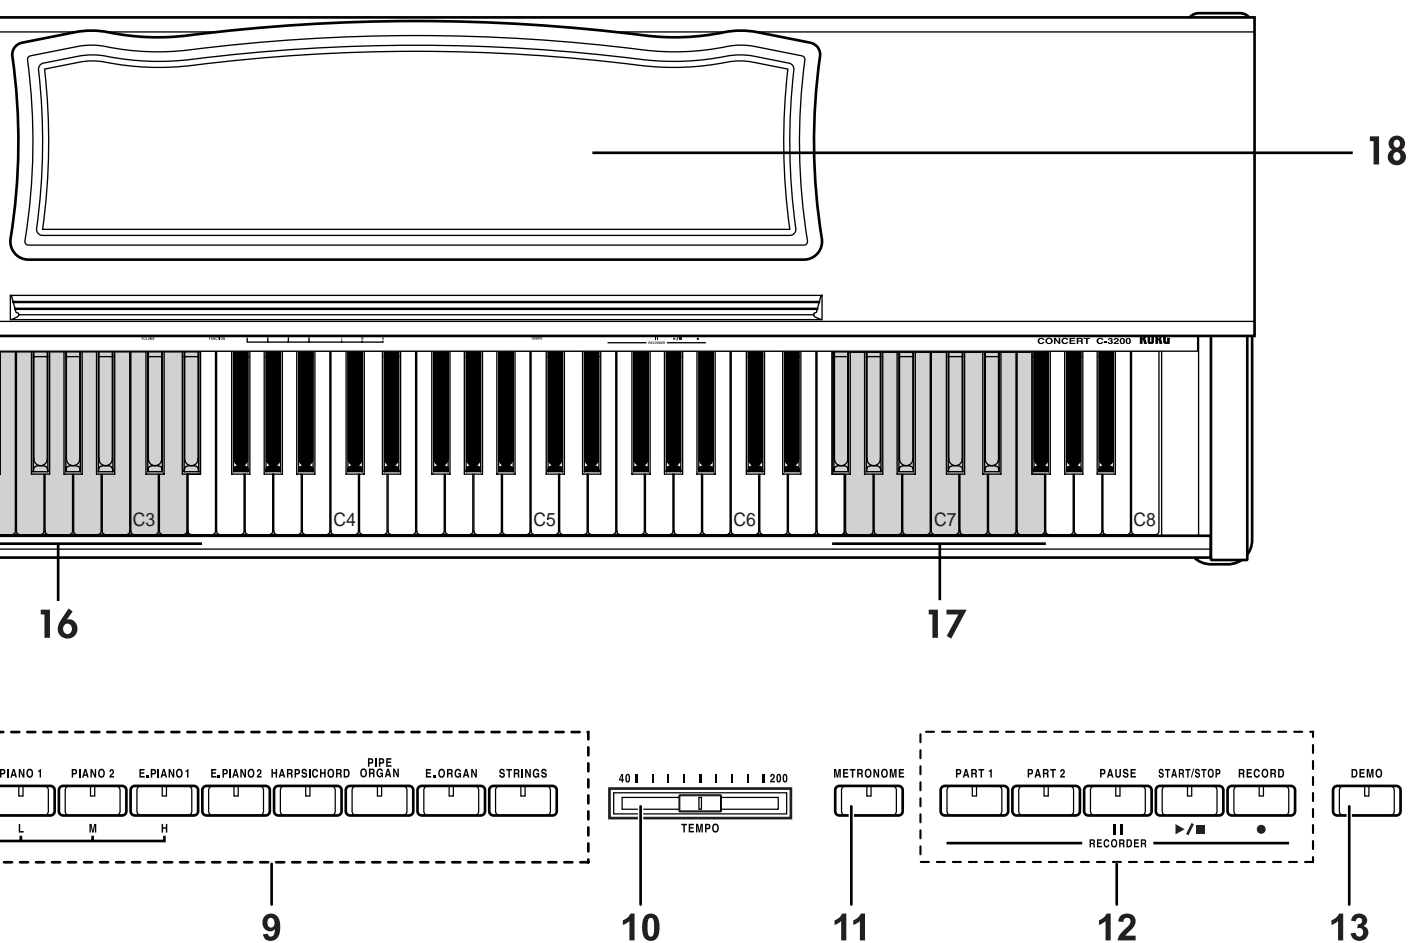

7. Reverb switch

This switch turns the reverb effect on and off (☞p.12).

8. Chorus switch

This switch turns the chorus effect on and off (☞p.12).

9. Sound selector switches

Use these switches to select a sound (☞p.10).

You can choose any of the eight sounds: Piano 1, Piano 2, E.Piano 1, E.Piano 2, Harpsichord, Pipe Organ, E.Organ, and Strings.

You can also select two sounds and they will play together (Layer function).

10. Tempo slider

This slider adjusts the tempo of both the metronome and the recorder (☞p.13).

11. Metronome switch

This switch starts and stops the metronome (☞p.13).

12. Recorder section

These controls are used to record and play back your performance (☞p.17).

13. Demo switch

This switch is used to enter and exit the Demo mode, where the demo songs may be played(☞p.8).

14. Headphone jacks (on the bottom panel)

Stereo headphones can be connected to these jacks (☞p.7).

15. Power indicator

16. MIDI channel keys

While holding down the Transpose/Function switch, these keys can be used to select the MIDI channel (☞p.19).

17. Transpose keys

While holding down the Transpose/Function switch, these keys can be used to transpose the C-3200 into another key (☞p.15).

18. Music stand (☞p.7)

Switch and key functions

This page lists the functions you can set from the switches and keys.

1. Sound selector switches


	PIANO 1	PIANO 2	E.PIANO1	E.PIANO2	HARPSICHORD	PIPE ORGAN	E.ORGAN	STRINGS	
	L		M	H					
TRANSPOSE FUNCTION +	Local ON/OFF	MIDI settings (⇨p.20–22) Program change ON/OFF		Control change ON/OFF	Data dump	Volume setting* (⇨p.10, 11) Increase volume of layer 1/low range	Increase volume of layer 2/high range	Octave setting* (⇨p.10, 11) Lower the octave of layer 1/low range	Raise the octave of layer 1/low range
TOUCH +	Keyboard touch (⇨p.14) Light Normal Heavy				Temperament setting (⇨p.16) Werckmeister Kirnberger		Octave setting* (⇨p.10, 11) Lower the octave of layer 2/high range		Raise the octave of layer 2/high range
BRILLIANCE +	Brightness setting (⇨p.12) Mellow Normal Bright				Volume of demo playback (⇨p.9) Lower the volume of the mute part				Raise the volume of the mute part
REVERB +	Reverb effect setting (⇨p.12) Light Deeper Deepest								
CHORUS +	Chorus effect setting (⇨p.12) Light Deeper Deepest								
METRONOME +	no accent	Time signature setting (⇨p.13) 2 beats 3 beats		4 beats	6 beats	Strong beat of metronome (⇨p.14) Normal sound Bell sound			

*Settings for the Layer function / Split function

2. Recorder section

	PART 1	PART 2	PAUSE	START/STOP	RECORD
	RECORDER				
TRANSPOSE FUNCTION +	Erase recorded data (⇨p.18) Erase part 1 Erase part 2			Remaining memory (⇨p.18)	Store the settings (⇨p.16)
TOUCH +	Pitch setting (⇨p.15) Lower Higher				
BRILLIANCE +	Part volume balance (⇨p.18) Make part 1 louder Make part 2 louder				
METRONOME +	Metronome volume (⇨p.14) Softer Louder				

3. Keyboard

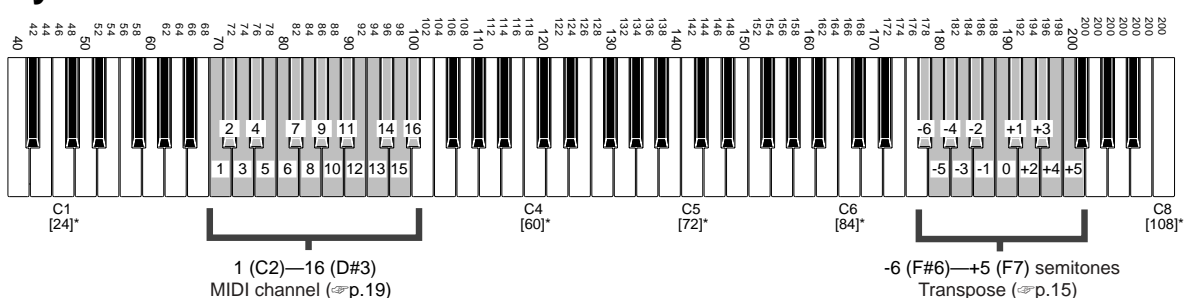

* [] is the MIDI note number

Getting ready to play


1. Before you start playing

1. Connect the power cable.

Plug the power cable connector into the socket located on the bottom of the piano (see p.26). Plug the other end of the power cable into an electrical outlet.

2. Open the key cover.

Gently lift the center of the sliding key cover by the indented portion, and support it while you slide it carefully and fully into the C-3200.

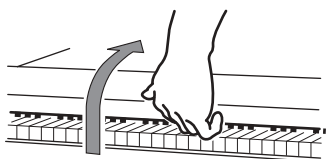


To close the key cover, gently lift the center by the indented portion, and slide it forward.

- ⚠ Be careful not to pinch your fingers or hand while opening or closing the key cover.
- ⚠ The key cover may be damaged if you use excessive force when opening or closing it.
- ⚠ Before you open the key cover, make sure that no foreign objects such as papers or coins are on the top of the key cover itself. Otherwise, these objects may fall into the instrument.

3. Turn on the power.


Press the Power switch to turn on the power. The power indicator located at the left side will light.

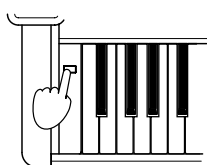

To turn off the power, press the Power switch once again. The power indicator will go dark.

4. Adjust the volume.

The Volume slider controls the volume of the built-in speakers, the headphone jacks, and the output jacks.



Raise the Volume slider to approximately the center position. Moving the slider toward the right will increase the volume, and moving it toward the left will decrease the volume. At the "0" position there will be no sound.

Adjust the volume to an appropriate level for your playing.


2. Using headphones with the C-3200

Insert the plug (1/4" phone plug) of your stereo headphones into the headphone jack located on the left side of the bottom panel.

When the headphones are plugged in, no sound will be heard from the built-in speakers.

You can use headphones when you do not want to be heard by those around you, such as when practicing at night.


There are two headphone jacks so two people can listen through headphones at the same time, such as student and teacher, etc...

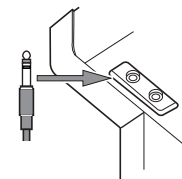

- ⚠ When using headphones, protect your ears by avoiding long periods of use at high volumes.
- ⚠ If you use headphones that have a 1/8" → 1/4" adaptor plug, grasp the adaptor plug when plugging-in or unplugging.

3. Using the music stand

Tilt the music stand upright, and use the two stoppers located on the rear to hold the music stand in place.

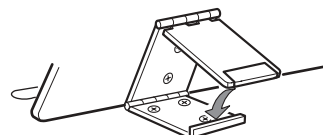

Listening to the demo songs

The C-3200 contains a total of 32 demo songs, with 8 stored in each of the four banks (A–D).

Bank A (No.1–No.8) contains demo songs that each feature one of the 8 internal sounds. Banks B–D (No.9–No.32) contain demo songs that use the piano sound.

Take a moment to listen to the demo songs and experience the C-3200's rich and expressive sounds.

Bank	No.	Sound selector switch	Title / Composer
A	1	Piano 1	Fantasy-Impromptu Op.66 / F.Chopin
	2	Piano 2	Harmony of Love / KORG Original
	3	E.Piano 1	Confusion / KORG Original
	4	E.Piano 2	The Garden / KORG Original
	5	Harpsichord	Invention No.1 / J.S.Bach
	6	Pipe Organ	Fuga G minor / J.S.Bach
	7	E.Organ	Cool "B" / KORG Original
	8	Strings	Air on the G string / J.S.Bach
B	9	Piano 1	The Well-Tempered Clavier, Book 1, Prelude No.1
	10	Piano 2	Sonata K.545 / W.A.Mozart
	11	E.Piano 1	Sonata K.331 / W.A.Mozart
	12	E.Piano 2	For Elise / L.v.Beethoven
	13	Harpsichord	"Arabesque" Op.100-2 / F.Burgmuller
	14	Pipe Organ	"La styrienne" Op.100-14 / F.Burgmuller
	15	E.Organ	"La chevaleresque" Op.100-25 / F.Burgmuller
	16	Strings	Springs Song Op.62-6 / F.Mendelssohn
C	17	Piano 1	Waltz No.6 Db-major Op.64-1 / F.Chopin
	18	Piano 2	Waltz No.6 E-minor Op.64-2 / F.Chopin
	19	E.Piano 1	Nocturne Op.9-2 / F.Chopin
	20	E.Piano 2	Mazurka Op.7-1 / F.Chopin
	21	Harpsichord	A Dream Op.15-7 / R.Schumann
	22	Pipe Organ	"Heidenroslein" / G.Lange
	23	E.Organ	Spinning Song / A.Ellmenreich
	24	Strings	Dolly's Dreaming and Awaking / T.Oesten
D	25	Piano 1	Golliwog's Cake walk / C.Deubussy
	26	Piano 2	"La fille aux cheveux de lin" / C.Deubussy
	27	E.Piano 1	"Arabesque" No.1 / C.Deubussy
	28	E.Piano 2	"Claire de lune" / C.Deubussy
	29	Harpsichord	Etude Op.10-5 / F.Chopin
	30	Pipe Organ	Etude Op.10-3 / F.Chopin
	31	E.Organ	"Gymnopédie" No.1 / E.Satie
	32	Strings	"Salut d'Amour" / E.Elgar

1. To listen to all the demo songs

1. Press the Demo switch.

The Demo switch indicator will light, and the C-3200 will enter the Demo mode.


The sound selector indicators will light one by one in a repeating pattern.



2. Press the Start/Stop switch.

Demo song no.1 "Fantasy Impromptu, Op.66" will begin, and the playback will continue consecutively through no.32 "Salut d'Amour."

When demo song no.32 finishes playing, the demo playback will return to no.1 and continue repeating.



If you press any of the sound selector switches while a song is playing, the demo songs within that bank will play repeatedly.

For example if no.10 "Sonata K.545, First Movement" is playing and you press the Strings sound selector switch, no.16 "Spring Song, Op.62-6 (from Songs Without Words, volume 6)" will be played. Then playback will return to no.9, and continue repeating.

It is not possible to change the sound used for each demo song. Nor will the metronome operate during demo playback.

3. To stop the demo playback, press the Demo switch.

You will exit Demo mode.

2. To listen to an individual demo song

To select a song from bank A


1. Press the Demo switch.

The sound selector indicators will light one by one in a repeating pattern.

2. Press a sound selector switch to choose a demo song.

From the left, the sound selector switches correspond to demo songs no.1–no.8.

The selected song will begin, and playback will continue in order up to no.8. Then playback will return to no.1 and continue repeating.

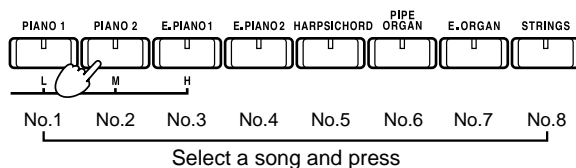

3. To stop the demo playback, press the Demo switch.

You will exit the Demo mode.

To select a song from bank B

1. Press the Demo switch twice.

All of the sound selector indicators will blink simultaneously.

2. Press a sound selector switch to choose a demo song.

From the left, the sound selector switches correspond to demo songs no.9–no.16.

The selected song will begin, and playback will continue in order up to no.16. Then playback will return to no.9 and continue repeating.

3. To stop the demo playback, press the Demo switch.

You will exit the Demo mode.

To select a song from bank C

1. Press the Demo switch three times.

Every other sound selector indicator will blink in alternation.

2. Press a sound selector switch to choose a demo song.

From the left, the sound selector switches correspond to demo songs no.17–no.24.

The selected song will begin, and playback will continue in order up to no.24. Then playback will return to no.17 and continue repeating.

3. To stop the demo playback, press the Demo switch.

You will exit the Demo mode.

To select a song from bank D

1. Press the Demo switch four times.

Adjacent pairs of sound selector indicators will blink successively.

2. Press a sound selector switch to choose a demo song.

From the left, the sound selector switches correspond to demo songs no.25–no.32.

The selected song will begin, and playback will continue in order up to no.32. Then playback will return to no.25 and continue repeating.

3. To stop the demo playback, press the Demo switch.

You will exit the Demo mode.

Note Pressing the Start/Stop switch will also stop the playback without exiting the Demo mode. This way you can select another Demo song, using the Start/Stop key once again to begin playback.

3. To pause the Demo playback

1. During playback, press the Pause switch.

Playback will pause.

2. Playback will resume when you once again press the Pause switch or press the Start/Stop switch.

4. Practicing along with a demo song

To practice right and left hands separately

For the demo songs in banks B–D, you can listen to the demo playback of either the right-hand or left-hand part, and turn down the volume of the other part so that you can play it yourself.

1. Select a song from no.9–no.32.

The song will begin playing.

2. To minimize the volume of the left-hand part, press the Part 1 switch. To minimize the volume of the right-hand part, press the Part 2 switch.

The indicator of the switch you pressed will blink. Now you can play along with the song.

Note You can adjust the level of the minimized volume.

While the demo is playing, hold down the Brilliance switch and press the E.Organ sound selector switch to decrease the volume even further. Alternatively, hold down the Brilliance switch and press the String sound selector switch to increase the volume.

3. To restore the left and right-hand parts to the same volume, press the switch for the part whose indicator is blinking.

The indicator will change from blinking to lit.

5. Adjusting the tempo of the demo playback

You can adjust the playback tempo of the demo songs in banks B–D.

- While playing or while paused, use the Tempo slider to adjust the tempo (p.13).



The tempo of the demo playback will not match the printed markings of the Tempo slider.


Each demo song has its own specified tempo. When the song changes, the tempo will revert to the setting that is specified for the new song even if you had modified the tempo of the previous song.

Playing the C-3200

1. Selecting sounds

- Press one of the sound selector switches to select a sound.

The selected switch indicator will light.



Piano 1	A concert grand piano sound with superb presence
Piano 2	A versatile grand piano sound usable for all styles
E.Piano 1	A vintage sounding electric piano with excellent dynamic response
E.Piano 2	A shimmering bell-like electronic piano sound
Harpischord	A realistic harpsichord sound with a classic atmosphere
Pipe Organ	A broad, full pipe organ sound
E.Organ	An electronic "pop" style organ sound
Strings	The sound of an ensemble string section


Playing two sounds together (the Layer function)

When you use the Layer function, two sounds (for example, Piano 1 and Strings) will be heard simultaneously when you play each key.

- Simultaneously press two of the sound selector switches.

Both switch indicators will light.

Of the two indicators that are lit, the sound at the left is referred to as Layer 1, and the sound at the right as Layer 2.

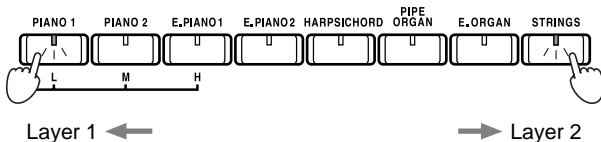

When the Layer function is used, the polyphony will be reduced to 32 notes (or 21 notes if you selected the Piano 1 sound).

- To turn off the Layer function, press just one sound selector switch.

To adjust the volume balance of the two sounds

You can adjust the volume balance of the two sounds you selected.

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to "9. Storing your settings" (p.16).


- Hold down the Transpose/Function switch, and press the Harpsichord or the Pipe Organ sound selector switches to adjust the volume balance.

Layer 1

Hold down the Transpose/Function switch and repeatedly press the Harpsichord sound selector switch to increase the volume of Layer 1.

Layer 2

Hold down the Transpose/Function switch and repeatedly press the Pipe Organ sound selector switch to increase the volume of Layer 2.

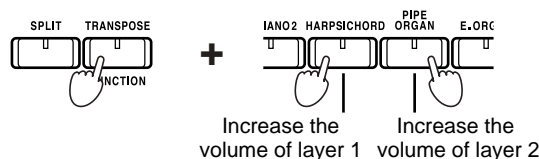

- Use the Volume slider to adjust the overall volume.

To change the octave of the two sounds


You can shift the pitch of each layer up or down 1 octave.

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to "9. Storing your settings" (p.16).

Layer 1

Hold down the Transpose/Function switch and press the E.Organ sound selector switch to shift the pitch of Layer 1 down one octave.


Hold down the Transpose/Function switch and press the Strings sound selector switch to shift the pitch of Layer 1 up one octave.

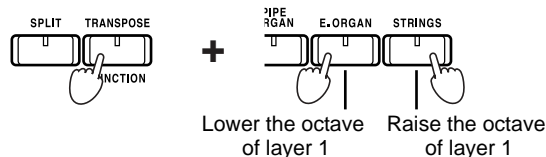

Layer 2

Hold down the Touch switch and press the E.Organ sound selector switch to shift the pitch of Layer 2 down one octave.

Hold down the Touch switch and press the Strings sound selector switch to shift the pitch of Layer 2 up one octave.

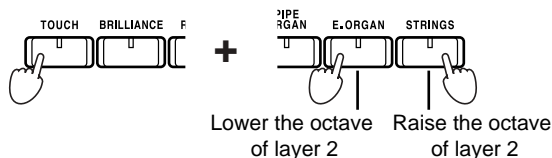

Using the Split function

You can select different sounds for the lower and upper ranges of the keyboard. This is called the Split function.

1. Press the Split switch.

The Split switch indicator will light.


The upper range will continue to play the selected sound.

The lower range will play a Bass sound. To select a sound other than Bass for the lower range, see step 3 below.

Note If you press the Split switch while you were using the Layer function, the sound selected for Layer 1 will be assigned to the upper range.

2. To change the split point, hold down the Split switch and press the desired note.

The note you pressed will become the split point, and will be part of the upper range.

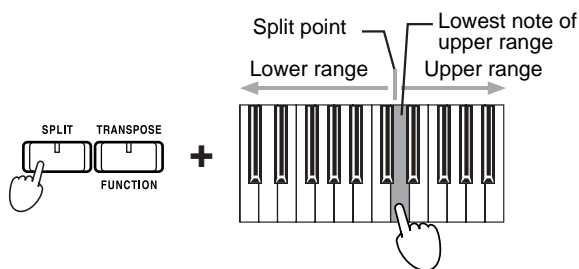

3. Selecting sounds.

Upper range

Select a sound by pressing one of the sound selector switches. The switch indicator will light.

Lower range

To select a sound other than Bass, hold down the upper range sound selector switch, and press a different sound selector switch to select a sound for the lower range.

The sound selector switch indicators for both the upper and lower sounds will light.

To return to the Bass sound, press the sound selector switch that you had chosen for the lower range.

The lower range will return to the Bass sound.

However, this sound will now be selected for the upper range, so you may need to re-select the sound for the upper range.

4. To turn off the Split function, press the Split switch.

The Split switch indicator will go dark.

To adjust the volume balance of the two sounds

You can adjust the volume balance of the two sounds you selected.


1. Hold down the Transpose/Function switch, and press the Harpsichord or the Pipe Organ sound selector switches to adjust the volume balance.

Lower range

Hold down the Transpose/Function switch and repeatedly press the Harpsichord sound selector switch to increase the volume of the lower range.

Upper range

Hold down the Transpose/Function switch and repeatedly press the Pipe Organ sound selector switch to increase the volume of the upper range.

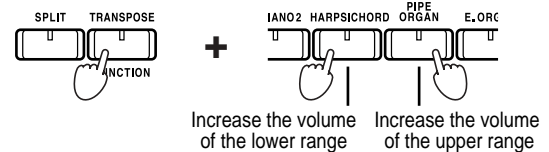

2. Use the Volume slider to adjust the overall volume.


To change the octave of the two sounds

You can shift the pitch of each range (upper and lower) up or down 1 octave.

Lower range

Hold down the Transpose/Function switch and press the E.Organ sound selector switch to shift the pitch down one octave.


Hold down the Transpose/Function switch and press the Strings sound selector switch to shift the pitch up one octave.

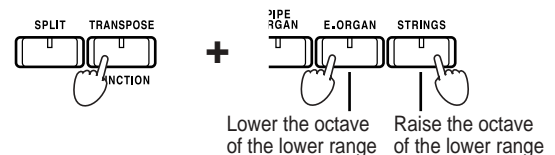

Upper range

Hold down the Touch switch and press the E.Organ sound selector switch to shift the pitch down one octave.

Hold down the Touch switch and press the Strings sound selector switch to shift the pitch up one octave.

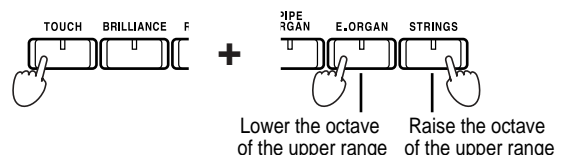

2. Adding effects to the sound

Adjusting the brightness of the sound

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).

- **Hold down the Brilliance switch and press either the Piano 1/L, Piano 2/M, or E.Piano 1/H sound selector switch to select the desired brightness.**

If you selected the Piano 1/L switch or E.Piano 1/H switch, the Brilliance switch indicator will light.


Piano 1/L	Softer tone
Piano 2/M	Normal tone
E.Piano 1/H	Brighter tone

Adding reverb to the sound

The Reverb effect re-creates the acoustic characteristics of playing in a concert hall, adding depth and ambience to your sound.

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).

1. **Hold down the Reverb switch and press either the Piano 1/L, Piano 2/M, or E.Piano 1/H sound selector switch to select the desired depth of reverb.**



Piano 1/L	Light reverb
Piano 2/M	Medium reverb
E.Piano 2/H	Deep reverb

2. **To turn off the reverb effect, press the Reverb switch.**

The Reverb switch indicator will go dark.


- **The Piano 1 and 2 sounds simulate the string resonances of an acoustic piano, so a slight reverb effect will remain even if you turn the Reverb effect off.**

Adding Chorus to the sound

The Chorus effect adds modulation, making the sound richer and more spacious.

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).

1. **Hold down the Chorus switch and press either the Piano 1/L, Piano 2/M, or E.Piano 1/H sound selector switch to select the desired depth of chorus.**




Piano 1/L	Light chorus
Piano 2/M	Medium chorus
E.Piano 2/H	Deep chorus

2. **To turn off the chorus effect, press the Chorus switch.**

The Chorus switch indicator will go dark.

3. Using the pedals

The C-3200 has three pedals: soft, sostenuto, and damper. You can use these pedals to add expression to your playing, as on a traditional piano.

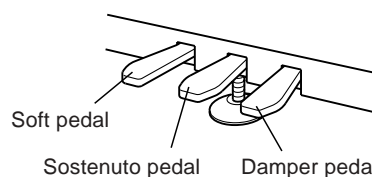

Damper pedal

Pressing this pedal will sustain the sound, producing a richly resonant decay. You can control the damper depth by how far down you press the on pedal (“half-pedaling”).

Sostenuto pedal

Pressing this pedal will apply the damper effect only to the notes that are already being held down on the keyboard, and will sustain only those notes. The damper effect will not be applied to any additional notes that you play while holding down the Sostenuto pedal.

Soft pedal

Pressing this pedal will make the tone softer. You can control the softness of the tone by how far down you press the on pedal (“half-pedaling”).


Pedal settings for the Layer and Split functions

You can select which sound(s) will be affected by the damper pedal when using the Layer and Split functions.


Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).

When using the Layer function, or the Split function with a sound other than bass in the lower range

1. Hold down the Transpose/Function switch, and press the damper pedal.

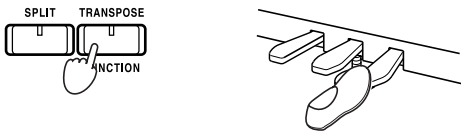

Each time you press the damper pedal, the pedal effect will be applied as shown below. At this time, the sound selector switch(s) will light to indicate which sounds will be affected by the damper pedal.

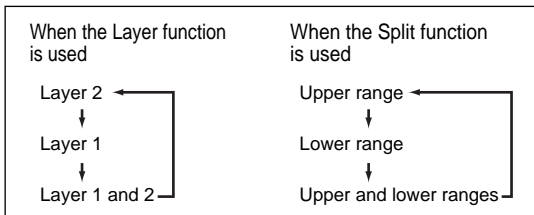


2. When you have finished making settings, release the Transpose/Function switch.

When using the Split function with Bass selected in the lower range

1. Hold down the Transpose/Function switch, and press the damper pedal.

Each time you press the damper pedal, the pedal effect will be applied as shown below. At this time, the sound selector indicator of the upper range sound will light in different ways to indicate which sound(s) will be affected by the damper pedal.

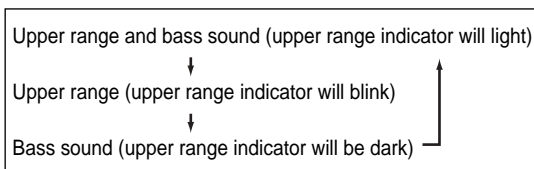

2. When you have finished making settings, release the Transpose/Function switch.

4. Playing along with the metronome

It is convenient to use the metronome when you want to play in a precise tempo. The metronome can also be set to a specific time signature and tempo; and can be used when recording your performance.

Using the metronome


1. Press the Metronome switch to start the metronome.
The Metronome switch indicator will light.



2. Press the Metronome switch once again to stop the metronome.
The Metronome switch indicator will go dark.


To adjust the tempo

1. Press the Metronome switch to start the metronome.
The Metronome switch indicator will light.
2. Move the Tempo slider to adjust the tempo.
You can set the tempo in the range from ♩=40–200.



! The markings of the Tempo slider may not always match the actual tempo.

If you want to set the tempo precisely, hold down the Metronome switch and press the note on the keyboard that corresponds to the desired tempo value (p.6).

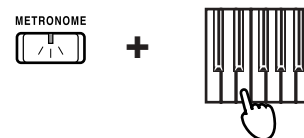

To set the time signature


When you first turn the C-3200 on, pressing the Metronome switch will play straight quarter notes at the selected tempo. You can select a time signature, and the metronome will accent the first beat of the measure.

1. Press the Metronome switch to start the metronome.
The Metronome switch indicator will light.

2. Hold down the Metronome switch and press a sound selector switch.

The indicator of the switch you pressed will light. When you press one of the sound selector switches (Piano 2/M through Harpsichord) to select the corresponding time signature, the first beat of the measure will be sounded with an accented beat.

If you press the Piano 1/L switch, the metronome will not provide an accent, and there will be no time signature.

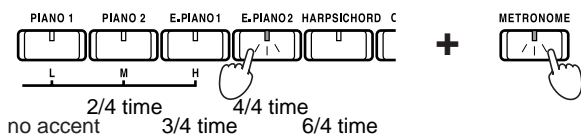

To adjust the metronome volume

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).


1. Press the Metronome switch to start the metronome.

The Metronome switch indicator will light.

2. Hold down the Metronome switch, and press either the Part 1 or Part 2 switch to adjust the volume.

Hold down the Metronome switch and repeatedly press the Part 1 switch to decrease the volume.

Hold down the Metronome switch and repeatedly press the Part 2 switch to increase the volume.

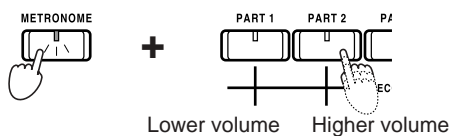

3. To return to the original volume, hold down the Metronome switch and press both the Part 1 and Part 2 switches simultaneously.

To sound a bell on the strong beat


Note The C-3200 can remember this setting even when the power is turned off. For details, refer to “9. Storing your settings” (p.16).

1. Press the Metronome switch to start the metronome.

The Metronome switch indicator will light.

2. Hold down the Metronome switch and press the E.Organ sound selector switch.

The E.Organ switch indicator will light, and a bell sound will be used on the accented beat.

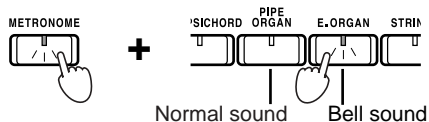

3. To return to the conventional sound for the accented beat, hold down the Metronome switch and press the Pipe Organ sound selector switch.

The Pipe Organ switch indicator will light.


5. Selecting the Touch Response Curve

The C-3200 offers three touch response curves, so you can select the way in which your keyboard playing strength will affect the loudness of the sound.


When the power is turned on, the Normal touch setting will be selected.

1. Hold down the Touch switch and press either the Piano 1/L, Piano 2/M, or E.Piano 1/H switch to select the desired touch sensitivity.


If you select the Piano 1/L switch or E.Piano 1/H switch, the Touch switch indicator will light.




Piano 1/L: Light touch (even light touch can produce loud notes)

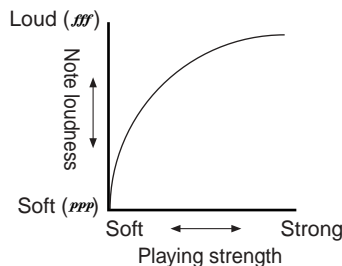

Piano 2/M: Normal touch

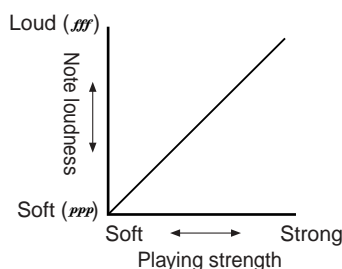

E.Piano 1/H: Heavy touch (heavy touch is necessary to produce loud notes)

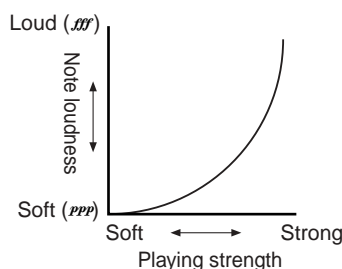

6. Changing the key (Transposing)


The C-3200's Transpose function lets you change the pitch in semitone steps. You can use this function to play a song at the correct pitch but in an easier key (e.g., a key with fewer sharps or flats), or to play a song at a different pitch to match another instrument or vocalist while still using the familiar fingering.

The pitch can be transposed in a range of eleven semitones.

1. **Hold down the Transpose/Function switch and press a key in the range of F#6–F7.**

If you press a key other than C7, the Transpose/Function switch indicator will light, showing that the pitch has been transposed.

The pitch of the entire keyboard will be shifted so that the key you pressed will produce the C7 pitch.

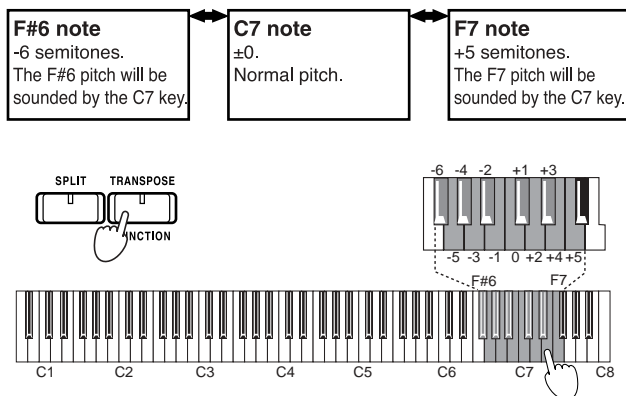


2. **To return to the original (non-transposed) setting, hold down the Transpose/Function switch and press the C7 key.**

The C-3200 will also return to the original pitch when the power is turned back on.

To raise the pitch of a song by one semitone

Here's an example where a C# will sound when you play a C key.

- **Hold down the Transpose/Function switch and press the C#7 key.**
The pitch has been transposed upward by a semitone, and playing the notes shown in the lower left will sound the pitches shown in the lower right.



To play a song in the key of Bb using the fingering of the G-scale

Bb is a minor third (three semitones) above G. So you will need to transpose the C-3200 so that when you play the C7 key, the D#7 pitch (three semitones above C7) will sound.

- **Hold down the Transpose/Function switch and press the D#7 key.**

7. Making fine adjustments to the pitch

You can make fine adjustments to the pitch.

Use this to correct small differences in pitch when you play together with other instruments, or when playing along with an existing recording.


The pitch can be adjusted in a range of +/-12.5 Hz (427.5 Hz–452.5 Hz).

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to "9. Storing your settings" (p.16).

To raise the pitch

- **Hold down the Touch switch and press the Part 2 switch.**


The pitch will rise by approximately 0.5 Hz each time you press the switch.



To lower the pitch

- **Hold down the Touch switch and press the Part 1 switch.**


The pitch will fall by approximately 0.5 Hz each time you press the switch.



To return to the original pitch

- **Hold down the Touch switch and press the Part 1 and Part 2 switches simultaneously.**

The pitch will return to the original setting (A4=440 Hz).



8. Selecting a temperament

Many classical compositions were originally composed using various temperaments. So that you can reproduce the original sound of these compositions, the C-3200 lets you select two types of historical temperament, Kirnberger and Werckmeister, as well as the Equal Temperament that is used on most keyboard instruments today.

Werckmeister

This is the Werckmeister III temperament created by the German organist and music theorist, Andreas Werckmeister. This temperament was created in the late Baroque era to allow relatively free modulation between keys.

Kirnberger


This is the Kirnberger III temperament created by Johann Philip Kirnberger in the early 18th century. This is used mainly for tuning harpsichords.

Equal temperament

This is the system of tuning used on virtually all keyboard instruments today. Since all semitones are spaced at equal intervals, you can play identical scales in any key.

To change the temperament

- Hold down the Touch switch and press the Harpsichord or Pipe Organ sound selector switch.

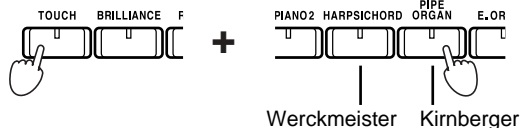

To return to equal temperament

- Hold down the Touch switch and press the sound selector switch whose indicator is lit. The indicator will go dark. You can also return to equal temperament by turning the power off and on again.


Note Piano 1 and Piano 2 sounds use stretched tuning. This is a method of tuning in which the lower range is tuned slightly flatter and the upper range is tuned slightly sharper than the equal tempered pitches, in order to produce a more natural-sounding resonance.

9. Storing your settings


The preceding pages of this manual have described how various settings can be adjusted to suit your own playing. If you want to, you can store the settings listed below so that they will be recalled by the C-3200 the next time the power is turned on.

A single operation stores all of the following settings:

- * **Brilliance**
For each sound (when Layered, for each combination of sounds)
- * **Reverb**
For each sound (when Layered, for each combination of sounds)
- * **Chorus**
For each sound (when Layered, for each combination of sounds)
- * **Layer volume**
For each combination of sounds
- * **Layer octave**
For each combination of sounds
- * **Pedal settings for Layer/Split**
For each combination of sounds
- * **Fine pitch adjustment**
- * **Metronome volume**
- * **Metronome sound for strong beats**
- * **Volume balance of each part when playing back performance data**

 Even if you erase the performance data you recorded, the playback volume balance settings for each part will not be erased. When you record performance data, the volume balance of the parts will follow the previously-stored settings, so you will need to adjust the volume balance settings or store them once again if necessary.


- Hold down the Transpose/Function switch and press the Record switch



10. Restoring the factory settings

You may decide that you want to return the C-3200 to the original factory settings.

This procedure will not erase what you played into the recorder, but will restore all other settings to their factory condition. If you want to erase the data in the recorder, refer to "3. Erasing the performance data" (p.18).


 Before you perform the following procedure, be sure that you really want to restore the factory settings.

1. Turn off the power.
2. Hold down the C8 key (the highest C note) on the keyboard, and turn on the power. The factory settings will be restored, and the switch LEDs will light rapidly from left to right.

Recording and playing-back your performance

The built-in recorder of the C-3200 lets you record and play back your performance as easily as when using a tape recorder.

There are two individual parts. You can use the two parts to record two different songs, or to separately record two parts of the same song and play them back together. Each part can play a different sound and, when done recording, you can even play along using a different sound


 When you record over a previously-recorded part, the existing data will be overwritten and lost. Before you record, make sure that it is OK to lose the existing data.

Note The recorded data will be preserved even when you turn off the power or restore the factory settings.

1. Recording your performance


To record your performance

1. Press a sound selector switch to select the sound you will use for recording the first part.



2. Press the Record switch.

The Record switch indicator will light.



3. Look at the Part 1 and Part 2 switch indicators to see the recorded status of each part.


If a part has already been recorded, its indicator will be lit green. If the indicator for a part is blinking green, then it contains recorded data, but its playback will be muted when the recorder is running.

4. Select the part that you want to record, and press its switch to make the indicator blink red.

Red blinking indicates that the part is in record-ready mode.


Note If you press the switch repeatedly, the switch indicator will cycle through the following states.

A part with no recorded data A part containing recorded data

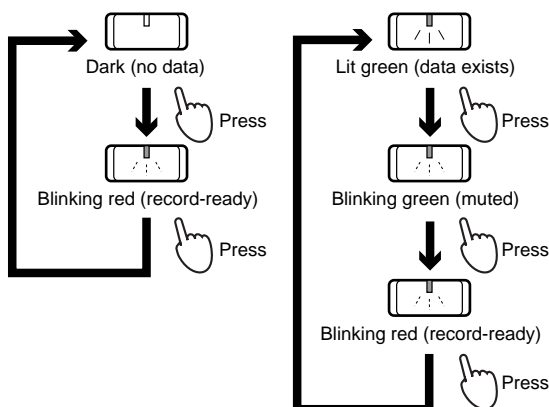

It is not possible to put both parts in record-ready mode at the same time. If one part is set to record-ready, and the other part already contains data, pressing the switch for the recorded part will alternate between the playback and mute modes.

ex: Part 1 contains recorded data, and part 2 is in record-ready status

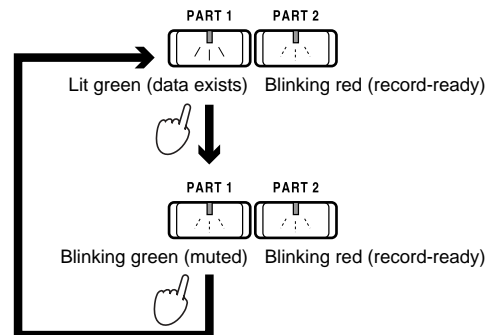


5. Press either the Start/Stop switch, the keyboard, or a pedal.

If you press the Start/Stop switch, recording will begin after a two-measure count.

If you press the keyboard or a pedal, recording will begin immediately.

Recording will also begin if a MIDI message is received on the MIDI channel that matches the part you selected in step 4 (see p.19).

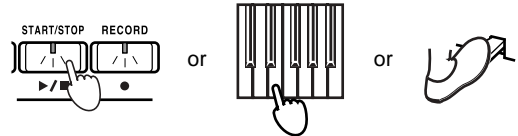

During recording, the Start/Stop switch indicator will blink in time with the time signature, red on the first beat and green on other beats.

If you use the sound selector switches to change sounds during recording, these sound selections will be recorded as part of the data. During playback, the same sound selections will change automatically.



Data for changes in the pedal settings (see p.13 "Pedal settings for the Layer and Split functions") cannot be recorded.

Note You can record at an accurate tempo while listening to the metronome (see p.13).

6. When you have finished recording, press the Start/Stop switch.

The Record switch indicator will blink while the recorded data is being stored into internal memory. After the data has been stored, the recorder will automatically return to the first measure.

Note

You can pause recording by pressing the Pause switch while recording (the Pause switch indicator will light).

To resume recording, first press the Record switch. Then press the switch for the part you are recording twice to return that part to the record-ready mode.

If you press the Start/Stop switch or the Pause switch while in record-ready mode, you will hear a two-measure count and then recording will start from the beginning of the measure at which you paused.

If you play the keyboard while in record-ready mode, recording will start from the paused location without a count.

When you resume recording after pausing, the transition may not always be recorded smoothly. When using this function, we recommend that you use the metronome while you record, and pause on the beat that the last recorded note ends. When you resume recording, you will start from the beat at which you stopped.

2. Listening to a song you recorded

To play back a song you recorded

1. Look at the Part 1 and Part 2 switch indicators to see the recorded status of each part.

If a part has already been recorded, its indicator will be lit green. If you do not wish to hear one of the recorded parts during playback, press its switch to make the indicator blink green.

2. Press the Start/Stop switch to begin playback.

During playback, the Start/Stop switch indicator will blink according to the time signature, red on the first beat and green on the other beats.

You can use the Tempo slider etc. to adjust the playback tempo (p.13).

3. To stop playback, press the Start/Stop switch.

Playback will end, and you will automatically return to the first measure.

Note During playback, you can press the Pause switch (the Pause switch indicator will light) to pause playback.

To resume playback, press the Start/Stop switch or the Pause switch.

When all of the recorded data has finished playing, playback will stop automatically and the Start/Stop switch indicator will go dark.

To adjust the volume balance of the two parts

Note The C-3200 can remember this setting even when the power is turned off. For details, refer to "9. Storing your settings" (p.16).

• If parts 1 and 2 are playing simultaneously, hold down the Brilliance switch and repeatedly press the switch (either Part 1 or Part 2) for the part that you want to make louder.

To return to the original setting, hold down the Brilliance switch and press the Part 1 and Part 2 switches simultaneously.

To play back your performance in a loop

You can make the entire recorded song play back repeatedly.

• During playback, press the Transpose/Function switch.

The Transpose/Function switch indicator will blink, and the playback will repeat. To stop playback, press the Start/Stop switch. The repeat setting will also be cancelled at this time.

3. Erasing parts

To erase a recorded part.

1. With playback stopped, hold down the Transpose/Function switch and press the switch of the part you wish to erase.


The indicators of the Transpose/Function switch and the switch whose part you pressed will blink alternately red and green, indicating that you are ready to erase that part.



If you decide to not erase the part, press the Transpose/Function switch again to cancel.

2. Once again, press the part switch that you pressed in step 1.

The indicator will blink while the data is being erased. When completed, the blinking will stop.




To check the amount of data that has been recorded

• Simultaneously hold down the Transpose/Function switch and Start/Stop switch.



The amount of performance data that has been recorded will be shown by the number of sound selector indicators that are lit. If a larger amount of data has been recorded, more of the indicators will be lit.

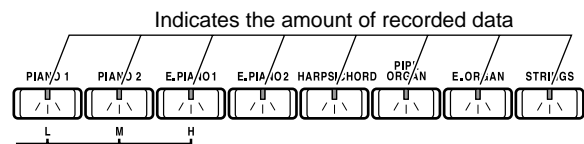

During recording, the Record switch indicator will blink if the amount of available memory decreases to 10% of the total memory.

10% or less means that 1,400 or fewer remaining notes can be recorded, or that 900 measures have been recorded (a maximum of 999 measures can be recorded).

Note If you want to save your recorded performance, we recommend that you save it using a computer or a commercially-available MIDI data filer. (p.22)

Connecting to other devices

1. Connections with a synthesizer, or audio system


You can connect a synthesizer or audio system to the C-3200, and play their sounds through the speakers of the C-3200, or record your performances on a tape recorder.

INPUT jacks (L/MONO, R)

These jacks allow you to play the output of another device - such as a synthesizer or audio system - through the C-3200's built-in speakers. To adjust the volume, use the volume control of the connected instrument or audio device.

OUTPUT jacks (L/MONO, R)

These jacks will allow you to play the C-3200 through an audio system for performing at higher volumes, or to record your performances on a tape recorder or other audio recording device.

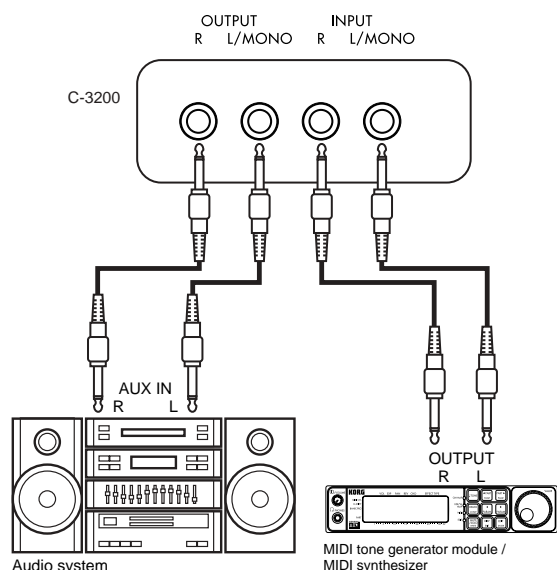

2. Connections with MIDI devices

What is MIDI?

MIDI (Musical Instrument Digital Interface) is a world-wide standard that allows various types of performance-related data to be exchanged between electronic musical equipment and computers.

MIDI lets you use the keyboard of the C-3200 to play another MIDI-connected instrument. Sound selections, pedal operations, etc. will also be controlled. Alternatively, you can use another MIDI keyboard or sequencer (automatic playback device) to control the C-3200 and play its internal sound generator. By using multiple MIDI devices together, you can enjoy even more varied ensembles. You can also use MIDI to save data that you have recorded on the C-3200's recorder. This section of the manual explains various ways in which you can use MIDI with the C-3200. If you would like to learn more about MIDI, you can read one of the many books available that explain MIDI in an easy to understand way.

MIDI connections

Commercially-available MIDI cables are used to transfer MIDI data. Connect these cables between the MIDI connectors of the C-3200 and the MIDI connectors of the other MIDI device. The C-3200 has two types of MIDI connector.

MIDI IN connector


This connector receives MIDI data.

It lets you use an external MIDI device (MIDI keyboard or sequencer) to play the sounds in the C-3200. Use a MIDI cable to connect the C-3200's MIDI IN connector to the MIDI OUT connector of the external MIDI device.

MIDI OUT connector

This connector transmits MIDI data.


The MIDI messages transmitted from this connector when you play the C-3200 can be used to control an external MIDI device. Use a MIDI cable to connect the C-3200's MIDI OUT connector to the MIDI IN connector of the external MIDI device.

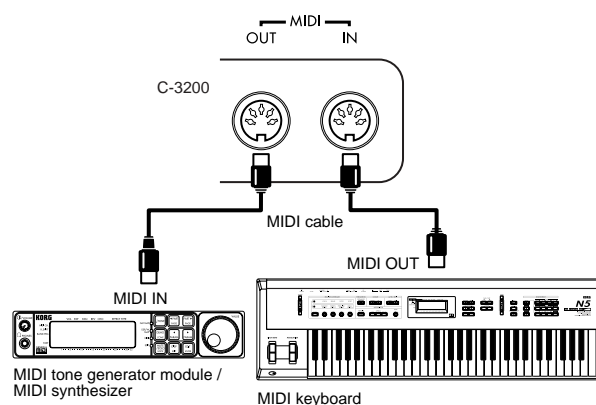

MIDI channels

When you have finished making connections, set the C-3200 to the same MIDI channel as the connected MIDI device. There are sixteen MIDI channels, numbered 1-16. When the C-3200 is first turned on, part 1 will automatically be set to channel 1, and part 2 will be set to channel 2.

- **To set the channel for part 1, hold down the Transpose/Function switch and press the key in the range of C2-D#3 that corresponds to the desired channel.**

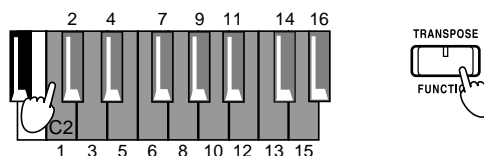

When you set the MIDI channel for part 1, part 2 will automatically be set to the next higher MIDI channel (i.e., one more than the MIDI channel of part 1). However if you set the part 1 MIDI channel to 16, the part 2 MIDI channel will be set to channel 1.

Using the C-3200 as a multi-timbral tone generator

The C-3200 can function as a 16-part multi-timbral tone generator that can be controlled and played from an external MIDI device.

1. **Use a MIDI cable to connect the MIDI IN of the C-3200 to the MIDI OUT of your sequencer (or similar device).**
2. **Transmit MIDI data from the connected sequencer (or similar device).**

For details on how to transmit data from a connected sequencer, refer to the owner's manual for that device.

The C-3200 can be set to receive program change messages along with the performance data. Reception of program changes and control changes can be disabled independently for each MIDI channel 1–16 (see “Program changes”, below)



When using the C-3200 as a multi-timbral tone generator, the sound that is selected from the C-3200's panel cannot be played by incoming data on the specified MIDI channel.

Local On/Off setting

The C-3200 provides a Local On/Off setting. You should use the Local Off setting when you want to play the C-3200's keyboard without sounding its internal tone generator, in order to play only an external tone generator connected via MIDI. You should also use this setting when using the C-3200 and an external sequencer. This will prevent notes from being double triggered (MIDI Echo).

Normally, you will leave the Local setting On so that the C-3200's internal sounds will be heard when you play the keyboard.

When the C-3200 is first turned on, the Local setting will be On.

- **Hold down the Transpose/Function switch and press the Piano 1/L sound selector switch.**

The Local setting will alternate between On and Off each time you press the switch.

Local On	Piano 1/L switch indicator is lit
Local Off	Piano 1/L switch indicator is dark

Program changes

Program numbers on a connected external MIDI device can be selected from the C-3200, or program numbers of the C-3200 can be selected from a connected MIDI device.

Transmitting program changes

Program numbers on a connected external MIDI device can be selected from the C-3200.

- **When you use the sound selector switches to select a sound, a MIDI program change number (0–99) will be transmitted as shown in the table.**

Receiving program changes

When a program change is received from an external device, sounds of the C-3200 will change as shown in the following table.

The C-3200 will switch sounds when it receives a MIDI program change number in the range of 0–99. The C-3200 will not respond to program change numbers higher than 99.

Single	PC#	Sound
	00	Piano 1
	01	Piano 2
	02	E.Piano 1
	03	E.Piano 2
	04	Harpsichord
	05	Pipe Organ
	06	E.Organ
	07	Strings
Layer	PC#	Sound (Layer 1, Layer 2)
	08	Piano 1, Piano 2
	09	Piano 1, E.Piano 1
	10	Piano 1, E.Piano 2
	11	Piano 1, Harpsichord
	12	Piano 1, Pipe Organ
	13	Piano 1, E.Organ
	14	Piano 1, Strings
	15	Piano 2, E.Piano 1
	16	Piano 2, E.Piano 2
	17	Piano 2, Harpsichord
	18	Piano 2, Pipe Organ
	19	Piano 2, E.Organ
	20	Piano 2, Strings
	21	E.Piano 1, E.Piano 2
	22	E.Piano 1, Harpsichord
	23	E.Piano 1, Pipe Organ
	24	E.Piano 1, E.Organ
	25	E.Piano 1, Strings
	26	E.Piano 2, Harpsichord
	27	E.Piano 2, Pipe Organ
	28	E.Piano 2, E.Organ
	29	E.Piano 2, Strings
	30	Harpsichord, Pipe Organ
	31	Harpsichord, E.Organ
	32	Harpsichord, Strings
	33	Pipe Organ, E.Organ
	34	Pipe Organ, Strings
	35	E.Organ, Strings
Split	PC#	Sound (Lower, Upper)
	36	Piano 1, Piano 2
	37	Piano 1, E.Piano 1
	38	Piano 1, E.Piano 2
	39	Piano 1, Harpsichord
	40	Piano 1, Pipe Organ
	41	Piano 1, E.Organ
	42	Piano 1, Strings
	43	Piano 2, Piano 1
	44	Piano 2, E.Piano 1

Split	PC#	Sound (Lower, Upper)
	45	Piano 2, E.Piano 2
	46	Piano 2, Harpsichord
	47	Piano 2, Pipe Organ
	48	Piano 2, E.Organ
	49	Piano 2, Strings
	50	E.Piano 1, Piano 1
	51	E.Piano 1, Piano 2
	52	E.Piano 1, E.Piano 2
	53	E.Piano 1, Harpsichord
	54	E.Piano 1, Pipe Organ
	55	E.Piano 1, E.Organ
	56	E.Piano 1, Strings
	57	E.Piano 2, Piano 1
	58	E.Piano 2, Piano 2
	59	E.Piano 2, E.Piano 1
	60	E.Piano 2, Harpsichord
	61	E.Piano 2, Pipe Organ
	62	E.Piano 2, E.Organ
	63	E.Piano 2, Strings
	64	Harpsichord, Piano 1
	65	Harpsichord, Piano 2
	66	Harpsichord, E.Piano 1
	67	Harpsichord, E.Piano 2
	68	Harpsichord, Pipe Organ
	69	Harpsichord, E.Organ
	70	Harpsichord, Strings
	71	Pipe Organ, Piano 1
	72	Pipe Organ, Piano 2
	73	Pipe Organ, E.Piano 1
	74	Pipe Organ, E.Piano 2
	75	Pipe Organ, Harpsichord
	76	Pipe Organ, E.Organ
	77	Pipe Organ, Strings
	78	E.Organ, Piano 1
	79	E.Organ, Piano 2
	80	E.Organ, E.Piano 1
	81	E.Organ, E.Piano 2
	82	E.Organ, Harpsichord
	83	E.Organ, Pipe Organ
	84	E.Organ, Strings
	85	Strings, Piano 1
	86	Strings, Piano 2
	87	Strings, E.Piano 1
	88	Strings, E.Piano 2
	89	Strings, Harpsichord
	90	Strings, Pipe Organ
	91	Strings, E.Organ
	92	Bass, Piano 1
	93	Bass, Piano 2
	94	Bass, E.Piano 1
	95	Bass, E.Piano 2
	96	Bass, Harpsichord
	97	Bass, Pipe Organ
	98	Bass, E.Organ
	99	Bass, Strings

Disabling program changes

If you do not want to receive or transmit program change messages, you can disable them.

When the C-3200 is first turned on, program changes will automatically be enabled for all MIDI channels.

- **Hold down the Transpose/Function switch and press the Piano 2/M sound selector switch.**

The setting will alternate between Enable and Disable each time you press the switch.

Enable	Piano 2/M switch indicator is lit
Disable	Piano 2/M switch indicator is dark

Program Change Disable can be set independently for each MIDI channel 1–16. For example if you set the MIDI channel to 1 and then set Program Change to Disable, the Disable setting for channel 1 will be remembered even if you then change the MIDI channel to 2.

Control changes

Messages such as Damper Pedal can be transmitted from the C-3200 to a control an external MIDI device. Conversely, these messages can be received from an external MIDI device to control the C-3200.

If you do not want to receive or transmit these messages, you can disable them.

When the C-3200 is first turned on, control changes will automatically be enabled for all MIDI channels.

- **Hold down the Transpose/Function switch and press the E.Piano 1/H sound selector switch.**

The setting will alternate between Enable and Disable each time you press the switch.

Enable	E.Piano 1/H switch indicator is lit
Disable	E.Piano 1/H switch indicator is dark

Control Change Disable can be set independently for each MIDI channel 1–16. For example if you set the MIDI channel to 1 and then set Control Change to Disable, the Disable setting for channel 1 will be remembered even if you then change the MIDI channel to 2.



Control changes from an external device will always affect both sounds of the Layer or Split functions, regardless of the pedal settings of the C-3200 (see p.13 “Pedal settings for Layer and Split”).

Synchronizing an external sequencer

An external MIDI sequencer or rhythm machine can be synchronized to the C-3200's recorder.

Since the C-3200 functions as the "master" device (the controlling device), the connected sequencer (or similar device) will be the "slave" device (the device that is controlled).

- 1. Use a MIDI cable to connect the MIDI OUT of the C-3200 to the MIDI IN of your sequencer.**

- 2. Set the connected sequencer so that it will function as a slave device.**

For details on how to make MIDI clock settings etc. on the connected device, refer to the owner's manual of that device.

- 3. Press the Start/Stop switch of the C-3200 to begin synchronized playback.**

The C-3200 will transmit MIDI Clock messages (messages used to synchronize the tempo) based on the tempo that you set on the C-3200.

Saving recorder data (Data Dump)

Performance data recorded on the C-3200's recorder can be saved on an external MIDI data filer (storage device), and then reloaded back into the C-3200's recorder for playback when necessary.



Carefully read the owner's manual for your data filer so that you do not accidentally erase important data.

To save performance data to a data filer

- 1. Use a MIDI cable to connect the C-3200's MIDI OUT to the MIDI IN of your data filer.**

- 2. Operate your data filer to make it ready to receive MIDI data from the C-3200.**

- 3. Hold down the C-3200's Transpose/Function switch and press the E.Piano 2 sound selector switch.**

The indicators of the Transpose/Function switch and E.Piano 2 switch will blink, and the C-3200 will be ready to transmit the data dump.

If you decide to cancel without transmitting the data, press the C-3200's Transpose/Function switch.

- 4. Press the Start/Stop switch.**

The data dump will begin, and the performance data will be transmitted to your data filer. While transmission is occurring, the Start/Stop switch indicator will blink.

When transmission is completed, the Start/Stop switch indicator will go dark, and the C-3200 will return to its normal condition.



The C-3200 will not produce sound while it is ready to transmit a data dump, nor while it is transmitting performance data to the data filer. The C-3200 will return to its normal operating condition when data transmission ends and the data has been stored in the data filer.

To load performance data from a data filer back to the C-3200's recorder

- 1. Use a MIDI cable to connect the MIDI IN of the C-3200 to the MIDI OUT of your data filer.**

- 2. Hold down the C-3200's Transpose/Function screen and press the E.Piano 2 sound selector switch.**

The indicators of the Transpose/Function switch and E.Piano 2 switch will blink, and the C-3200 will wait to receive a data dump.

If you decide to cancel the operation at this point, press the C-3200's Transpose/Function switch.

- 3. Set your data filer to transmit the saved C-3200 performance data. For details on how to do this, refer to the owner's manual of your data filer.**

The C-3200 will receive the performance data. The Record switch indicator will blink while the data is being received.

When the performance data has been completely received, the Record switch indicator will go dark, and the C-3200 will return to its normal state.



The C-3200 will not produce sound while it is receiving performance data from the data filer. The C-3200 will return to its normal operating condition when data reception ends and the data has been loaded back into the internal recorder.

Troubleshooting

Power does not turn on

- Is the power cable connected to the C-3200?
- Is the power cable connected to an appropriate AC outlet?
- Is the power switch turned on? (☞p.7)
- Did you verify that the outlet is working? (Plug a device known to be working into the same outlet.)
- If the power still does not turn on, unplug the power cable from the AC outlet, and contact the distributor for your country.

No sound

- The C-3200's Volume slider may be set to "0". (☞p.7)
- A plug may be inserted in the headphone jack.
- Have you made settings so that the selected part will play back? (☞p.18)
- Has performance data been recorded for the selected part? (☞p.18)
- Make sure that the Local setting is turned On. (☞p.20)

Notes are interrupted

- You have exceeded the maximum polyphony. If you exceed the maximum polyphony, the C-3200 will turn off a currently-sounding note and give priority to the last-played note. This means that a currently-sounding note will be interrupted. For sounds other than Piano 1, the maximum polyphony is 64 notes. However, Piano 1 uses two notes of data, meaning that the maximum polyphony will be 32 notes. When using the damper pedal, when using the Layer function to play two sounds together, or when playing back recorded data using multiple sounds, you should keep the maximum polyphony in mind as you select sounds.

Something is wrong with the pitch or tone of a piano sound in a specific range

- The piano sounds of the C-3200 re-create the sound of a piano as faithfully as possible. This may mean that certain overtones may appear to be louder in some ranges, or you may notice differences between different pitches or ranges. This is not a malfunction.

Pedal functions do not work correctly

- Is the pedal connector plugged in correctly? (☞p.26)
- If the pedal effect does not work when using Layer or Split, make the settings once again. (☞p.13)

Can't record

- Is there enough free space in the recorder? (☞p.18)

External device does not respond to the transmitted MIDI data

- Make sure that the MIDI cable is connected correctly. (☞p.19)
- Make sure that the C-3200 is transmitting MIDI data on the same channel as selected on the receiving device. (☞p.19)

Specifications

Keyboard	88 key (A0–C8) RH2 (Real Weighted Hammer Action 2) keyboard
Sounds	9 sounds: Piano 1 Piano 2 E.Piano 1 E.Piano 2 Harpsichord Pipe Organ E.Organ Strings Bass (when using Split)
Tone generator system	Stereo sampling
Maximum polyphony	64 notes
Effects	Reverb (3 levels) Chorus (3 levels) Brilliance (3 levels)
Recorder	2 parts maximum 14,000 notes Tempo Metronome Record Start/Stop Pause
Keyboard modes	Single, Layer, Split
Temperaments	3 (Equal Temperament, Kirnberger, Werckmeister)
Touch Control	3 curves (Light, Normal, Heavy)
Controls	Power switch Volume slider Split switch Transpose/Function switch Touch switch Brilliance switch Reverb switch Chorus switch Sound selector switches Tempo slider Metronome switch Demo switch
Pedals	Soft* Sostenuto Damper* (*: half-pedaling supported)
Connectors	Headphone jacks x 2 MIDI connectors (IN, OUT) Input jacks (L/MONO, R) Output jacks (L/MONO, R)
Main amp	20 W x 2
Speakers	16 cm x 2
Power supply	117 V 54 W 230 V 52 W
Dimensions (W x D x H)	1,391 x 462 x 882 mm / 54.76 x 18.19 x 34.72 inches (including stand; with music stand folded down)
Weight	47 kg / 103.62 lbs. (with stand)
Included items	Special stand Power cable

- * Specifications and appearance are subject to change without notice for product improvement.
- Sound processed with INFINITY (TM).

Assembling the stand (STD-3200)

Warning



Two or more people are required in order to assemble the stand.

Cautions for assembly

In order to assemble the stand correctly, please note the following points.


- Assemble the stand according to the procedure given here, and make sure that you use the correct parts in the correct orientation.
- If you apply excessive force to the front of the digital piano before fastening it to the stand, it may fall off the stand. Please use caution.

Assembly procedure

You will need to provide a Philips (+) screwdriver.


1. Open the packing carton and remove the contents.

Make sure that you have all of the following items.

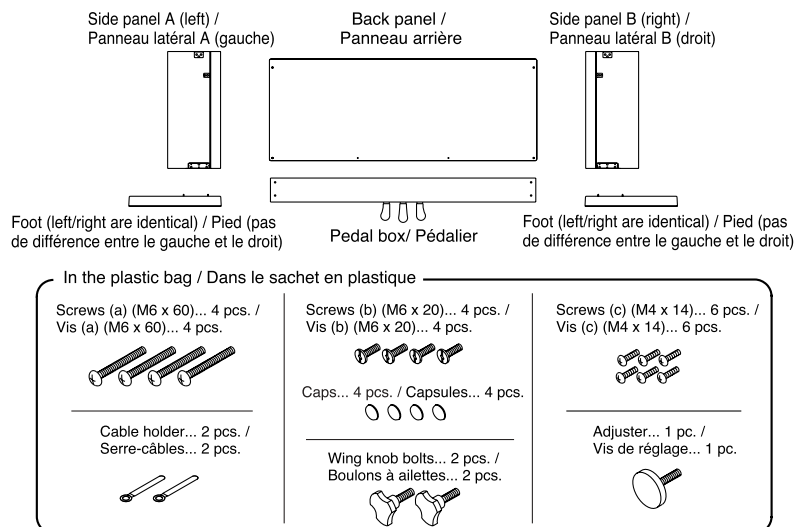


2. Use the long screws (a) to fasten the feet to side panels A and B.

Align the two protrusions on each foot with the holes in the side panel.

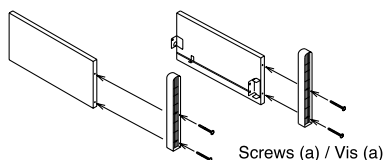

3. Use screws (b) to loosely fasten the pedal box to the side panels that you assembled in step 2.

Tighten screws (b) only as far as necessary to keep them from falling out.

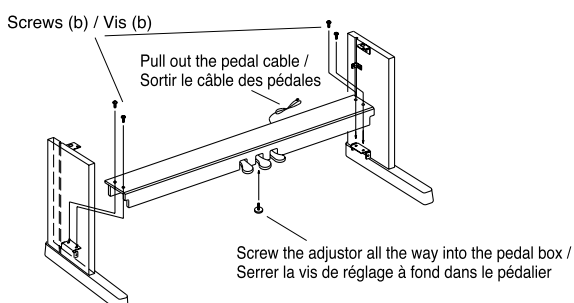

Montage du support (STD-3200)

Avertissement



Le montage du support requiert au minimum deux personnes.

Précautions liées au montage

Pour assembler correctement le support, respectez les consignes suivantes:

- * Montez le support en suivant la procédure ci-dessous, en veillant à utiliser les éléments ad hoc et à les orienter correctement.
- * N'appliquez pas de force excessive à l'avant du piano numérique avant de l'avoir fixé sur le support, car le piano risquerait de tomber du support. Soyez donc prudent.

Procédure de montage

Pour effectuer le montage, veuillez vous munir d'un tournevis Philips (+).

1. Ouvrez l'emballage en carton et retirez-en tous les éléments.

Vérifiez que l'emballage contient bien chacun des éléments suivants.


2. Montez les pieds aux panneaux latéraux A et B à l'aide des longues vis (a).

Alignez les deux saillies sur chaque pied avec les trous pratiqués sur les panneaux latéraux.

3. Montez le pédalier sur les panneaux latéraux assemblés à l'étape précédente, en vissant légèrement les vis (b).


Tournez simplement les vis (b) pour qu'elles ne puissent pas se détacher.

4. Insert the back panel into the grooves of the side panels.

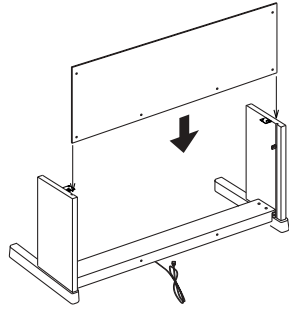

5. Use screws (c) to fasten the back panel.

First use screws to fasten the two top locations. When fastening the lower screws, fasten a cable holder along with the second screw from the left (by passing the screw through the hole in the cable holder). Then fasten the other cable holder in the same way together with the far-right or far-left screw, depending on the location of the electrical outlet you will be using.

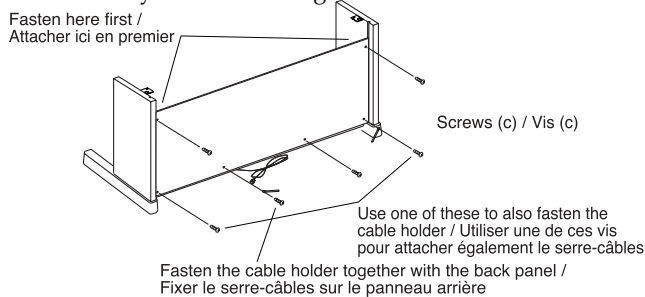

6. Check that there are no gaps in the stand and that it is not skewed, and firmly tighten all screws, including those in step 3.


7. Attach caps to the heads of screws (b) (see step 3).

8. Attach the piano to the stand.

Place the piano on the stand so that the plastic feet on the bottom of the piano enter the holes in the metal brackets of the side panel. Then use the wing knob bolts to fasten the piano from below.




Get another person to help you place the piano on the stand, and set it down slowly and carefully so that you do not pinch your hand or drop the piano.

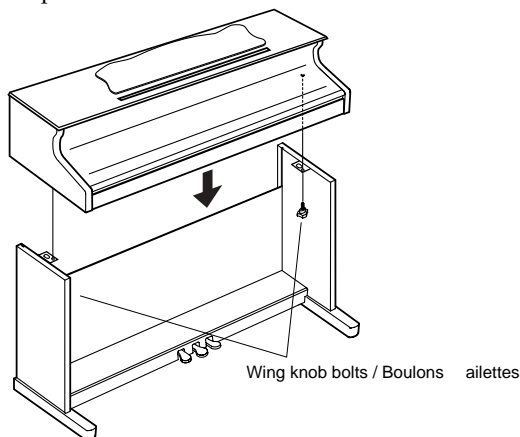

9. Loosen the adjuster located below the pedals until it firmly contacts the floor.



If the adjuster does not contact the floor firmly, the pedals may wobble, causing malfunctions.

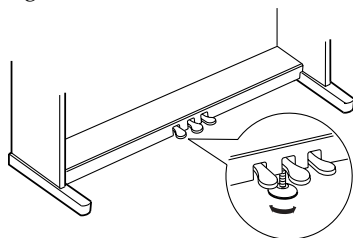

4. Glissez le panneau arrière dans les rainures des panneaux latéraux.

5. Fixez le panneau arrière avec les vis (c).

Fixez d'abord les deux vis du haut. Quand vous serrez les vis du bas, veillez à poser un serre-câbles en même temps que la deuxième vis à partir de la gauche (en faisant passer la vis à travers le trou du serre-câbles).

Suivez ensuite la même procédure pour fixer l'autre serre-câbles avec la vis de l'extrémité gauche ou droite (selon l'emplacement de la prise de courant que vous comptez utiliser).

6. Assurez-vous qu'il n'y a pas d'interstice sur le support et qu'il est bien droit, puis serrez fermement toutes les vis, y compris celles montées à l'étape 3.

7. Montez les capsules sur les têtes des vis (b) (voyez l'étape 3).

8. Fixez le piano sur le support.

Placez le piano sur le support, de sorte que les pieds en plastique en bas du piano pénètrent dans les trous pratiqués sur les fixations en métal des panneaux latéraux.

Fixez ensuite le piano par le dessous, en montant les boulons à ailettes.



Faites-vous aider pour poser le piano sur son support. Posez-le doucement et précautionneusement, en veillant à ne pas vous pincer les doigts ni à laisser tomber l'instrument.

9. Desserrez la vis de réglage située en-dessous des pédales, jusqu'à ce qu'elle touche fermement le sol.




Si la vis de réglage ne repose pas fermement sur le sol, les pédales risquent de bouger et de provoquer des dysfonctionnements.

10. Connect the pedal cable and power cable to the bottom panel of the panel, and use the cable holders to fasten the cables.



Pay attention to the orientation of the connectors when you plug them in.

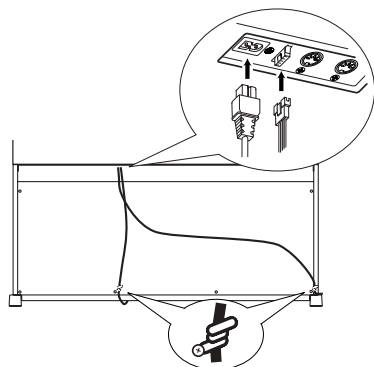

Check after assembly

- **Are any parts left over?**

If any parts are left over, check them against the assembly procedure to determine where they should be used, and reassemble the stand correctly.

- **Make sure that all screws are correct, and that they are tight.**

Other cautions

After you have assembled the stand, please observe the following cautions.

- **Loosened screws**

After the stand has been assembled, screws may loosen as time passes. We recommend that you regularly check for screws that have become loose. If you feel that the stand has become unsteady, screws may be loose. Please retighten the screws.

- **Transport**

Remove the digital piano from the stand, and use two people to carry it separately from the stand. At the new location, reassemble the piano and stand as described in "Assembly procedure."

- **Disassembly**

If you need to disassemble the stand, do so in the reverse order of assembly. After disassembly, keep all screws and other parts together so that they don't get lost.

10. Branchez le câble des pédales et le cordon d'alimentation au bas du piano et fixez-les avec les serre-câbles.



Vérifiez que l'orientation du connecteur est correcte avant d'effectuer tout branchement.

Vérifications après le montage

- **Tous les éléments sont-ils montés?**

S'il reste des éléments non montés, vérifiez leur emplacement dans la procédure de montage et recommencez l'assemblage du support.

- **Vérifiez que toutes les vis sont correctement installées et serrées.**

Autres précautions

Une fois que vous avez monté le support, observez les précautions suivantes:

- **Vis desserrées**

Au fil du temps, il se pourrait que des vis du support se desserrent. Nous vous conseillons de vérifier régulièrement que toutes les vis sont bien serrées.

Si le support semble instable, c'est sans doute que des vis sont desserrées. Resserrez-les.

- **Transport**

Vous devez retirer le piano numérique de son support. Pour cela, faites-vous aider par une autre personne.

Une fois à destination, remontez le piano sur son support, en suivant les consignes sous "Procédure de montage".

- **Démontage**

Si vous devez démonter le support, faites-le en inversant l'ordre du montage. Une fois le support démonté, rassemblez toutes les vis et les autres pièces en veillant à ne pas les égarer.

Function		Transmitting	Receiving	Remarks
Basic channel:	Default Changed	1 1-16	1 1-16	
Mode:	Default Message Altered	X *****	3 X	
Note number:	True Voice	15-113 *****	0-127 21-108	
Velocity:	Note ON Note OFF	O9n, V=1-127 X	O9n, V=1-127 X	
Afertouch:	Key's Ch's	X X	X X	
Pitch bender:		X	X	
Control change:	7 11 64 66 67 91,93 120,121	O O O O O O X	O O O O O O O	Volume *1, *4 Expression *1, *4 Damper pedal *1, *3 Sostenuto pedal *1 Soft pedal *1, *3 Reverb send, Chorus send *1, *4 All sound off, Reset all controllers
Prog change:	True#	0-99 *****	0-99 0-99	*2
Exclusive:		O	O	Device Inquiry Sequence Data Dump
Common:	Song position Song select Tune	X X X	X X X	
Realtime:	Clock Commands	O O	X X	
Aux message:	Local ON/OFF All notes OFF Active sensing Reset	X X O X	O O 123-127 O X	
Remarks:	*1: Transmitted/received when control changes are enabled *2: Transmitted/received when program changes are enabled *3: Half-pedal output value (0, 38, 74, 127) *4: Transmitted Sequence data only			

Mode 1: OMNI ON, POLY

Mode 2: OMNI ON, MONO

O: Yes

Mode 3: OMNI OFF, POLY

Mode 4: OMNI OFF, MONO

X: No

* Consult your local Korg distributor for more information on MIDI Implementation.

IMPORTANT NOTICE TO CONSUMERS

This product has been manufactured according to strict specifications and voltage requirements that are applicable in the country in which it is intended that this product should be used. If you have purchased this product via the internet, through mail order, and /or via a telephone sale, you must verify that this product is intended to be used in the country in which you reside.

WARNING: Use of this product in any country other than that for which it is intended could be dangerous and could invalidate the manufacturer's or distributor's warranty.

Please also retain your receipt as proof of purchase otherwise your product may be disqualified from the manufacturer's or distributor's warranty.

KORG KORG INC.

15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo, Japan